



THE HYC 200 TON SLIP TYPE ELEVATOR OPERATING PROCEDURE MANUAL

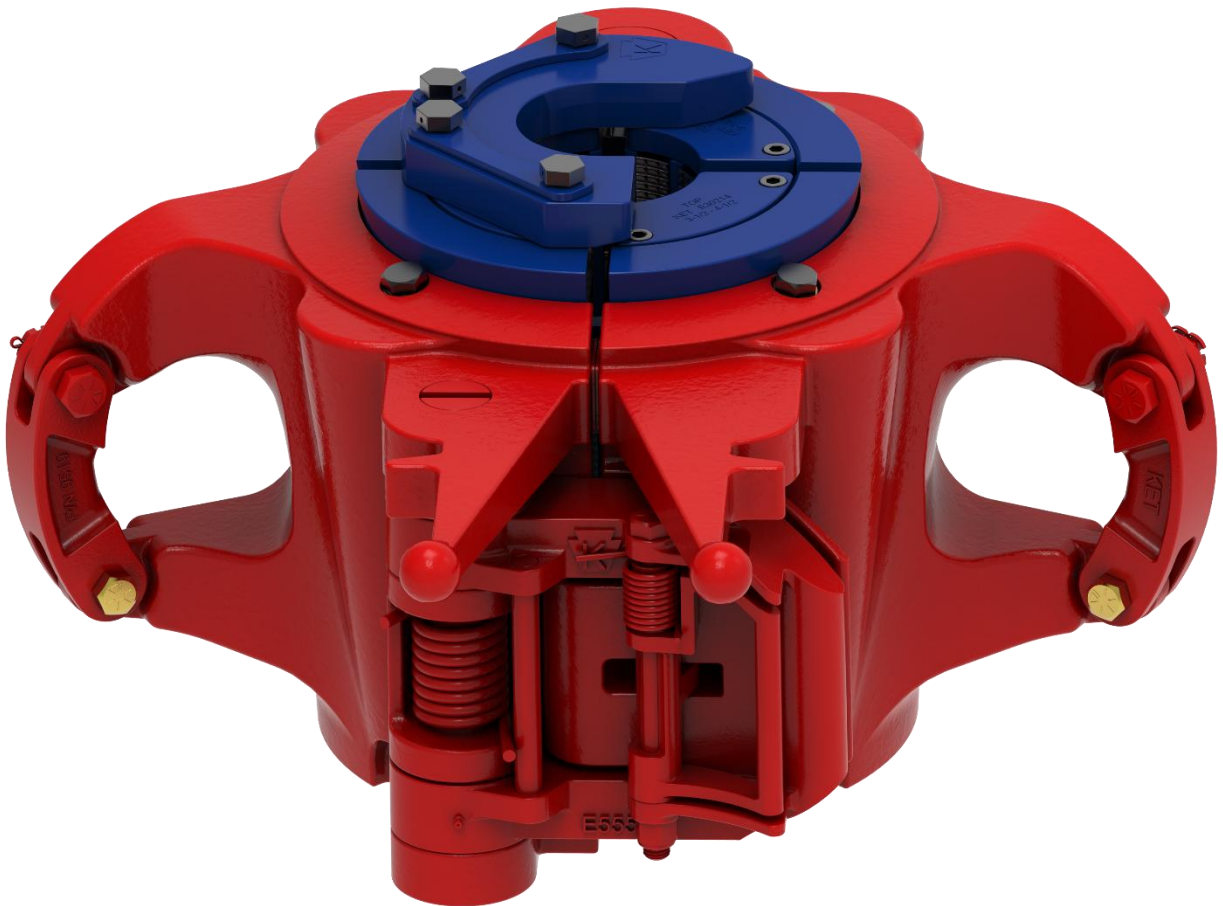


Table of Contents

Table of contents	2
Safety instructions	3
vertical vs horizontal lifts	3
Safety instructions	4
1.0 Introduction	5
Figure 1 – HYC model chart	5
CE Marking	5
2.0 Installation	6
3.0 Operation	7
4.0 Maintenance & Inspection	8-10
Maintenance location drawing	9
Pre & Post Job Inspection Checklist	10
5.0 Repair & critical areas	11-14
Figure 2 – setting plate movement illustration	13
Figure 3 – wire tie diagram	14
Critical area map drawing	15
6.0 Technical drawings	16-18
7.0 HYC elevator & assembly's	19
8.0 HYC elevator replacement parts	20
8.0 HYC slip replacement parts	21
9.0 HYC elevator wear data	22
9.0 HYC setting plate wear data	23
10.0 Reception, storage, transport, decommissioning	24
Certificate of warranty & guarantee of quality	25
Manufacture Information & Revision History	26

"HYC" SERIES ELEVATOR

SAFETY INSTRUCTIONS

The most important safety device for this tool is **YOU**. Your good judgment is the best protection against injury.

⚠ WARNING



To reduce the risk of injury, everyone using, installing, performing maintenance, changing accessories on, or working near this tool must read and understand these instructions before performing any such task.

Operating Hazards

⚠WARNING: Do not overload the elevator. Overloading the recommended rating could cause series injury or death.

⚠WARNING: Check the latch for proper engagement. A malfunctioning latch could cause the elevator to unexpectedly unlatch or not latch at all and could result in injury or death.

⚠WARNING: Always insure that the elevator and slips are correct for the tubular it is to be used on. Failure to use the proper elevator and slips could result in injury or death.

⚠WARNING: Always ensure that the tool joint or collar O.D. of the pipe is correct. Failure to maintain adequate contact area could result in injury or death.

⚠WARNING: To prevent injury or elevator malfunction, inspect the elevator slips, inserts, setting plate, retainer plate, retainer screws, slip bolts, setting plate bolts, bushings, latch, hinge pin, and latch pin regularly for wear. Failure to inspect these parts could cause injury or death.

⚠WARNING: Do not use undersized pipe. Using undersized pipe could cause an inadequate load bearing area and uneven stress distribution. Both of which may result in injury or death.

⚠WARNING: Do not use the elevator if the latch or latch lock pin is malfunctioning. Latch or latch lock pin failure, may result in injury or death.


⚠WARNING: All warning labels attached to the equipment must be observed. The warning labels must be present on the tool. Do not remove the labels. If they are missing, replacing is mandatory.

⚠WARNING: The company operating the tool is responsible for issuing work instructions for safe and proper use of the equipment.

⚠WARNING: The operating company is responsible for verifying that any personnel operating, servicing, inspecting, or otherwise involved with the use of the tool must be properly trained correctly.

⚠WARNING: Do not use oversized pipe. Using oversized pipe could make it difficult or impossible to properly latch the elevator.

Vertical / Non-vertical Lifting

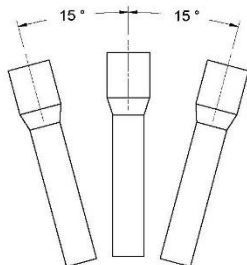

Vertical lifting is considered vertical $\pm 15^\circ$



Non-vertical lifting is considered $\leq 75^\circ$ as max. from horizon.

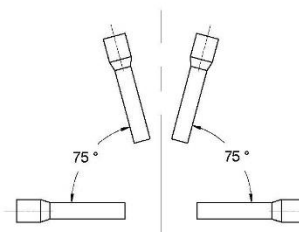


Figure 1

DO NOT DISCARD – GIVE TO USER

Keystone ENERGY TOOLS

"HYC" SERIES ELEVATOR

SAFETY INSTRUCTIONS

The most important safety device for this tool is **YOU**. Your good judgment is the best protection against injury.

⚠ WARNING



To reduce the risk of injury, everyone using, installing, performing maintenance, changing accessories on, or working near this tool must read and understand these instructions before performing any such task.

Workplace Hazards

⚠WARNING: keep hands/fingers clear of the elevator bore when installing the elevator around the pipe.

⚠WARNING: Always use the proper tools and wear eye, head, hand, and foot protection when servicing this elevator.

⚠WARNING: Maintain a balanced body position and secure footing.

⚠WARNING: For professional use only.



Read Operation manual before use.



Pay attention: do not place your hands between moving parts.



DO NOT lift from this area.



 
Be careful when lifting from these areas.

Maintenance Hazards

⚠WARNING: Use only Keystone Energy Tool components on equipment. Failure to do so may affect the correct functioning of the tool and may cause injury or death.

⚠WARNING: KET equipment is made of cast alloy heat treated steel and should never be welded on in the field. Improper welding can cause cracks or brittleness in the castings which could result in drastic weakening or failure of the equipment. Any welding or machining must be performed by an authorized KET or API certified repair center.

⚠WARNING: Improper welding and/or re-machining of cast alloy heat treated steel can cause personnel injury, property damage, or death.



DO NOT DISCARD – GIVE TO USER **Keystone** ENERGY TOOLS

1.0 Introduction

This technical manual contains operation and maintenance instructions for Keystone “HYC” series, slip-type, center latch, manual elevators with assembly drawings and complete parts breakdown. It provides a guide for proper field use, disassembling and repair.

The Keystone “HYC” series elevators is designed to be used on all API collar type, integral joint tubing, and casing. They are balanced making them easy to handle and easy to latch on and take off at any point below the upset of the tubing. The “HYC” series elevator incorporates a four-slip interlocking gripping mechanism assuring of uniform grip with minimum marking to the tubular. All Keystone elevators are made up of high alloy, heat treated, steel construction, and designed to meet or exceed API specifications.

The “HYC” series elevator include safety features such as guarded operating handles to help prevent accidents to operators and an extra handle at the rear of the elevator for easier, safer operation. The “HYC” elevators incorporate a latch and safety latch lock combination. The size range of the “HYC” series elevator is as illustrated in the table provided.
(See Figure 1)

NOTE: The maximum allowable load capacity of an elevator and slip assembly is governed solely by the **elevator body rating**. The slip functions as a load-transfer component and does not define the load capacity of the elevator it is used in.

Model	Tons	Range
HYC	200	3 ½" - 7 5/8"

Figure 1

NOTE: WARNING labels have been installed at critical areas on the tool. Familiarize yourself with their message and locations before proceeding to operate equipment.

See Safety Instructions Page 4

⚠WARNING: During use, the elevator should never be run into the tool joints or couplings inducing any type of shock load into the equipment. Shock loads are an impact-type force applied over a short instant of time. In shock loading, the energy of the applied force is ultimately absorbed, or transferred, to the elevator designed to resist the force. The application of shock loads to an elevator can cause shock/fatigue stress loading potentially resulting in premature stress/fatigue failure.

CE Marking



The tool complies with the Machinery Directive 98/37/EC and 2006/42/EC


This operating manual is a part of the technical documentation for the product.

The EC Declaration of Conformity is delivered together with the product. Keep these instructions and the associated documents for later use.

2.0 Installation

As with any manual operated elevator, the “HYC” series elevator is easily installed on the links. Before installing ensure that the correct size of elevator, slip assembly, setting ring, and inserts are installed for the tubular being run. After using a tugger line or cat line to lift the elevator onto the rig floor and position it next to the rotary table, perform the following procedure:

- ▶ Remove cotter pins and nuts from the bottom link block bolts and then remove the bolts from the elevator.
- ▶ Lift the bottom of the link blocks and hook the small end of the links through the link blocks and link arms.
- ▶ Lower the link blocks and re-install the link block bolts, nuts and cotter pins.

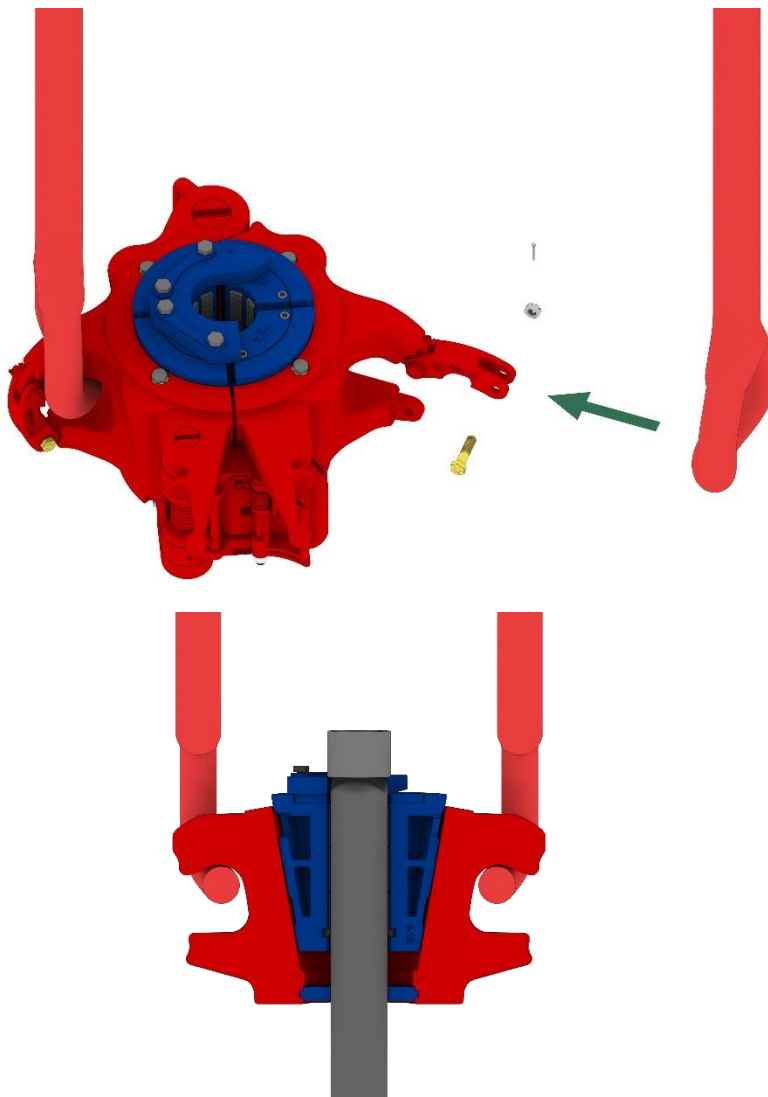

3.0 Operation

Operation of the elevator is straight forward. The door is opened by gripping the latch lock and pulling outward. This automatically releases the latch and latch lock assembly so the elevator can be positioned on the pipe. When the elevator is properly closed around the pipe, the latch locks automatically (see caution). The slips set when the elevator is raised and the setting ring makes contact with the tool joint or collar which pushed the slips down in the elevator bore. To open the elevator, ensure that there is no load on the elevator and that the slips are not under any load, then simply pull the latch lock handle out and swing the elevator halves apart. When making or breaking connections always insure that the slips are released (in the raised position). Once the connection is finished then the load can be re-applied.

NEVER ROTATE PIPE WITH THE SLIPS SET

- ▶ “HYC” series elevators should only be used with the proper size setting ring and inserts for the tubular they are being used on.
- ▶ Elevators are manufactured to operate at rated capacity in a vertical direction. When used to pick up or lay down a single joint of pipe in a non-vertical position, the operator must ensure that the latch, safety latch & latch springs are in good working order and that the elevator is fully latched. Prior to hoisting with the elevator from any position, it is necessary to ensure that the elevator is completely installed around the pipe and that the latches are properly engaged. Failure to do this could result in serious injury.
- ▶ Be sure to use the handles provided for operating the elevator. Keep hands and fingers clear of the elevator bore when installing the elevator on the tool joint.
- ▶ Make sure all slip segments are free and in the up position when latching the elevator. If any of the segments are stuck in the down position, the elevator will not close properly.
- ▶ Oversized pipe could cause difficulties in latching or possibly result in the elevator latching partially or not at all. Undersized pipe will cause the slips to not set properly and possibly allow the tool joint to slip through the elevator.
- ▶ Always inspect the inserts and setting ring for proper size and wear, a wrong size or worn setting ring or inserts could allow the pipe to become wedged or fall through the elevator.
- ▶ Inspect the bore, latch, latch pin and hinge pin regularly for wear.
- ▶ Make sure link block bolts are retained with nuts and cotter pins.

4.0 Maintenance & Inspection

PRACTICE SAFETY AT ALL TIMES WHEN SERVICING THE EQUIPMENT AND USE APPROVED SAFETY METHODS, MATERIAL AND TOOLS. ALWAYS WEAR PROTECTIVE GEAR FOR EYES, HEAD, AND HANDS.

TO INSURE OPTIMUM PERFORMANCE FROM THE “Y” SERIES ELEVATORS, THE FOLLOWING CHECKS SHOULD BE PERFORMED BY A PERSON KNOWLEDGEABLE OF THE EQUIPMENT AND ITS FUNCTION, A MINIMUM OF:

DAILY:

- ▶ Visually inspect for cracks, loose fits or connections, elongation of parts, and other signs of wear, corrosion or overloading.
- ▶ Loose or missing components, deterioration, proper lubrication, and adjustment.
- ▶ Check for worn hinge pin, latch pin, and latch lock pin. These may inhibit proper closing of the door and latch lock engagement.
- ▶ Check slip springs, rubber bushings, inserts for wear.
- ▶ Check slip setting ring for wear and damage in the setting area.
- ▶ Check for proper operation of latch stop mechanism. The latch should not stop against door when closed but have no more than $\frac{1}{4}$ " of standoff from the door.
- ▶ Check springs for damage or lack of tension.
- ▶ Check link block bolts for nuts and cotter pins.

***Note: After every job, a full NDT inspection of the setting plate should be completed. If any indications are found the setting plate is no longer acceptable for continued use.**

EVERY 6 MONTHS:

- ▶ This inspection should include everything that is done in the daily inspection plus.
- ▶ A full NDT inspection of all primary-load carrying components as defined by the manufacturer.
- ▶ Inspect for excessive wear, cracks, flaws and deformations.

To perform the 6 month inspection all foreign material such as dirt, paint, grease, oil, scale, etc. shall be removed from the elevator by a suitable method of either, grit blasting, or paint stripping and steam cleaning.

FREQUENCY OF INSPECTIONS:

The owner/user of the equipment should develop schedules of inspection based upon experience, the manufactures recommendations, and one or more of the following factors.

- | | |
|---------------------------|-----------------|
| ▶ Environment | ▶ Testing |
| ▶ Load cycles | ▶ Repairs |
| ▶ Regulatory requirements | ▶ Remanufacture |
| ▶ Operating time | |

4.0 Maintenance & Inspection

Lubricate the elevator regularly during usage and when in storage to prevent corrosion. Use an extreme pressure, multi-purpose, lithium base grease of no. 1 or no. 2 consistency and multi-weight motor oil. When the elevator is in use, lubricate according to the following schedule.

*****When greasing of pins make sure the pump grease until it comes out of both ends.*****


DAILY:

- ▶ Grease hinge pin
- ▶ Lubricate latch pin and latch lock pin
- ▶ Grease underside of the lifting eyes
- ▶ Check link block bolts for nuts and cotter pins

WEEKLY:

- ▶ Brush Grease on springs
- ▶ Grease link retainer fasteners
- ▶ Check link block bolts for nuts and cotter pins
- ▶ Grease Bore
- ▶ Grease the backs of the slips

Maintenance Locations

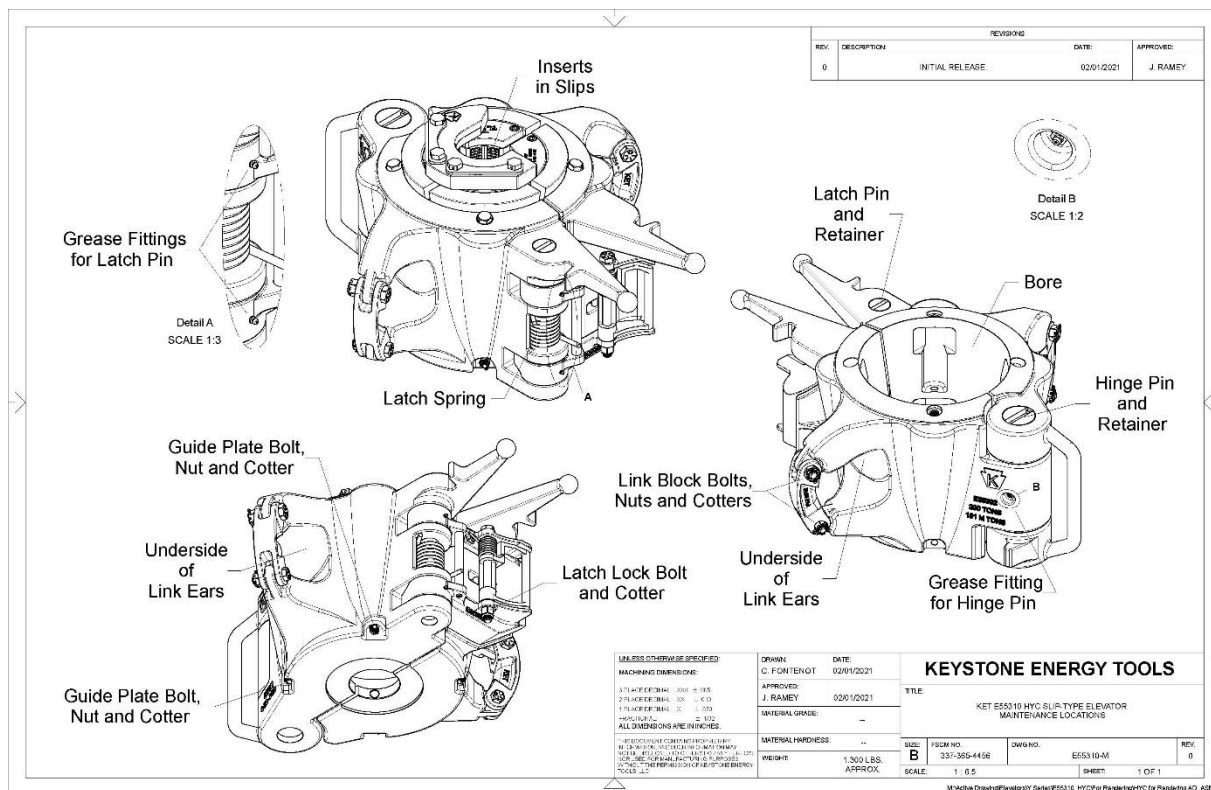

4.0 Maintenance & Inspection

Pre-Job Inspection

- ☐ Check that the latch & latch lock has proper tension and that it functions properly.
- ☐ Check that the setting plate, insert retainers, and inserts are the correct size for the tubular being ran.
- ☐ Check that the setting plate is properly assembled with setting plate bolts, bushings, washers, and retained by safety wire.
- ☐ If using a riser setting plate, verify that the setting plate is properly secured using a chain tying the setting plate to the rear handle of the elevator.
- ☐ Check that the hinge and latch pin retainer are correctly securing the pins.
- ☐ Check that the elevator slips function properly with the slip bolts and springs installed with proper spring tension when the slips are in the up position.
- ☐ Grease the back of the slips and all other grease points.

Post Job Inspection

- ☐ Wash and remove any excessive dirt, grease, and fluids.
- ☐ Disassemble and perform MPI inspection on critical areas.
- ☐ Check the elevator for wear (*hinge/latch pins and pin bores, elevator bore, insert slots*).
- ☐ Check that there is proper spring tension holding the slips in the up position when installed in the elevator. *NOTE: 100-200lb. can be added to top of slip assembly and the slips should not digress inside the elevator.*
- ☐ Check the slip bolt bosses on the back of the slip for wear.
- ☐ Check the inserts for wear, nicks, flats, and/or damage.
- ☐ Check the setting plate or riser setting plate for wear, damaged, or deformation. *NOTE- risers setting plates require the vertical disturbance length to be checked for squareness.*
- ☐ Perform an MPI inspection on setting plate.
- ☐ Grease all grease points and back of slips properly.
- ☐ Function test the elevator and slips 5 to 10 times to ensure it functions properly.

5.0 Repair & Critical Areas

All "HYC" series elevators are designed and manufactured similarly. Both elevators incorporate lock bars to retain the hinge & latch pins.

INSERT REPLACEMENT

Always wear eye protection when removing or replacing inserts to protect against chip fragments.

TO REMOVE WORN INSERTS OR CHANGE SIZES:

- ▶ Remove guide plate, slip setting ring, bushings, and insert retainer plates.
- ▶ Using a brass punch and hammer, drive out the inserts from the bottom of the slip.
- ▶ Clean and grease the insert slots before installing new inserts.

Important: Install the correct size inserts for the tubular used and make sure the teeth are pointing in the up position.

SLIP INSERTION AND REMOVAL:

- ▶ Open the elevator fully and clean the slip taper and spring pockets.
- ▶ Clean the slips if necessary and grease the taper portion of the slip body.
- ▶ Insert the slip springs into the spring pocket leaving the inner edge of the spring exposed.
- ▶ Starting on the left side of the elevator and proceeding counter clockwise, insert assembled slip bodies into the elevator one at a time. Compress the edge of the slip spring with the bottom of the top lug on the slip back and ease it into the upper spring pocket.
- ▶ Then insert the slip retaining pin or bolt through the top of the elevator, slip body lug and into the slip spring. Do not insert the pin or bolt completely through the spring until both pins retain their respective slip body and slip spring.

- ▶ Once both slip pins or bolts are in place then screw retaining bolts into place
- ▶ Make sure the proper size of inserts are loaded into the slip segments and then place an insert retainer plate into each slip.
- ▶ Place the riser slip setting ring over the slips on the left hand side of the elevator. Attach the slip setting ring to the slip segments with rubber bushings, washers and setting plate bolts. (Note: the setting ring must be placed on the left side of the elevator to avoid obstructing the casing entering the elevator).
- ▶ Secure the insert retainer plates with the insert retainer screws on the right side of the elevator.
- ▶ Tighten all insert retainer screws. Then tighten the setting plate bolts to the torque value of a minimum of **18 ft-lb.** & maximum of **20 ft-lb.** ensuring there is a **1/32" to 3/32" gap** between the underside of the bolt head and the washer or setting plate retainer. (See Figure 2)
- ▶ All setting plate bolts and insert retainer screws that secure the slip setting ring and insert retainers shall be secured with safety wire to prevent them from backing out during operation. A minimum of **.032" stainless steel safety wire** is recommended. (See Figure 3)

Important: Never exceed 20 ft. lbs. on setting plate bolt torque. Failure to do so can result in injury or death.

TO PREVENT JAMMING, CHECK EACH PAIR OF SLIP BODIES FOR THE FOLLOWING:

- ▶ Free movement of slip body on guide pin.
- ▶ No interface of slip guide lug in spring recess slots.
- ▶ A gap between the slips when they are set and fully compressed.

For slip removal, the top guide plate, slip setting ring, and slip retaining bolt must be removed from the elevator.

5.0 Repair & Critical Areas

“HYC” SERIES DISASSEMBLE PROCEDURE

- ▶ “HYC” series latch pins are retained by dowel pins that must be removed before driving out latch pin. Drive out latch pin from bottom of elevator.
- ▶ To remove the latch lock pin, remove dowel pins and drive out latch lock pin. Remove cotter key and drive out the latch lock pin.
- ▶ Remove the hinge pin by driving it out from the bottom of the elevator, shearing the lock bar in the process and remove the latch pin in the same manner. As an alternative method, the lock bar can be drilled in the center, then split by using a chisel and removed. In either case the lock bar must be discarded.
- ▶ To remove the link block, remove cotter keys from the link block bolts and unscrew link lock bolts.
- ▶ If the door lug pin is damaged, drive or press it out from the bottom of the lug.
- ▶ Inspect all parts for damage, wear, and cracks and replace as required. It is recommended that the springs be replaced at this time.
- ▶ Reassembling is the reverse of disassembling.
- ▶ Install new lock bars and or dowel pins on hinge & latch pins.
- ▶ After assembly, ensure that full spring tension is available to close the latch & latch lock. The latch spring should contact the latch cam and or latch stop which in turn transmits the spring force to the latch.
- ▶ Check the latch for proper engagement with the door lug pin by holding the body and door apart (such that the latch contacts the lug on the door) and attempt to pry the latch open. After minimal travel of the latch the hook on the latch lock should engage with the door lug pin stopping the travel of the latch.
- ▶ Check link block bolts, nuts, & cotter pins

KEYSTONE ENERGY TOOLS, FACTORY TOOL REPAIR.

Worn or damaged elevators are returned to like new condition with factory repair procedures based upon API 8B Specification. When tools are received for repair, they are disassembled, dimensionally checked and undergo a magnetic particle inspection. Worn areas are repaired by welding or replacing with new parts, and then heat-treated to original hardness specifications. They are proof load tested and undergo another magnetic particle inspection 24 hours after load test. They are then reassembled, functionally tested and re-certified.

CAUTION:

- ▶ Do not use any elevator if the latch and latch lock do not function properly.
- ▶ Use only parts manufactured and sold by Keystone Energy Tools or one of KET's authorized distributors.
- ▶ Re-machining and re-heat treating should be performed only by KET or at a KET approved repair facility. Improper machining could result in increased stress or improper alignment of the component parts. Either condition could be hazardous to personnel and equipment.
- ▶ Due to the complex metallurgy used in KET elevators, welding should be done only at KET or a KET approved repair facility.
- ▶ Bodies, doors, and latches are specifically matched by KET professionals. For this reason, a body, door and or latch from one elevator should never be exchanged with parts from another elevator.
- ▶ Always wear eye protection and the proper clothing when grinding, striking, or handling parts.
- ▶ Make sure link block bolts have nuts and cotter pins.
- ▶ If the load rating of the elevator is ever exceeded for any reason the elevator should immediately be removed from service and returned to the manufacturer for evaluation.

5.0 Repair & Critical Areas

Setting Plate Movement Illustration & Instructions

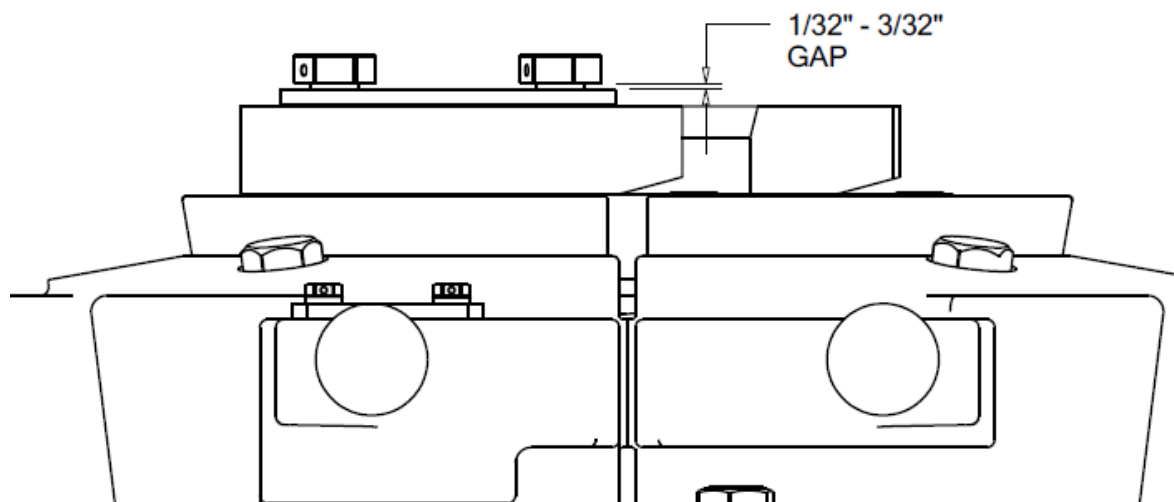


Figure 2

Design Intent

KET Slip Type Elevators are intentionally designed so the **setting plates** remain **free to move** after the setting plate bolts have been tightened to the specified torque value of a minimum of **18 ft-lb.** and a maximum of **20 ft-lb.** Maintaining the required **1/32 in. to 3/32 in. GAP** clearance is a critical design feature that allows the setting plates to articulate with the movement of the slips during operation.

As the slips are loaded by the tubular, they move downward and inward within the elevator body. This movement changes the relative position of the setting plate bolts between the unloaded (slips raised) and loaded (slips set) positions. The required clearance allows the setting plates to accommodate this movement without binding.

If the specified clearance is not maintained, the setting plate may become clamped between the bolt head and the setting plate retainer. As the slips move downward and inward under load, the resulting side loading and misalignment can cause the setting plate bolts to become wedged, restricting the intended movement of the setting plate, and possibly shearing the bolts. This condition subjects the bolts and associated components to loads for which they were not designed and may result in component damage or failure.

Maintaining the specified bolt torque and clearance is therefore essential to ensure proper elevator operation and to minimize the risk of component failure that could result in dropped objects.

⚠ WARNING: Never stack washers, retainers, or modify setting plate bolt lengths in any way to eliminate the setting plate from having the required gap.

5.0 Repair & Critical Areas


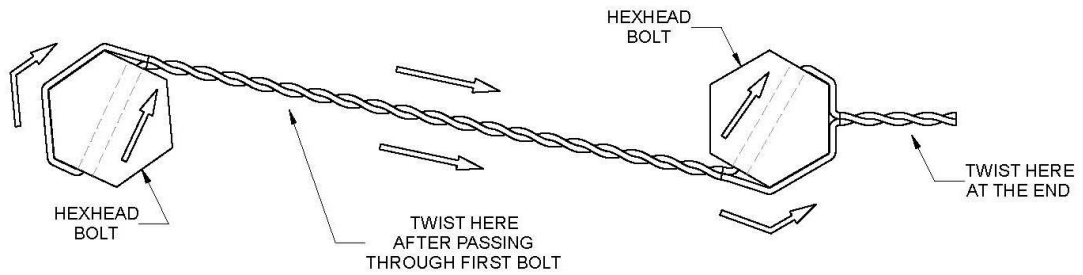


Figure 3

5.0 Repair Critical Areas

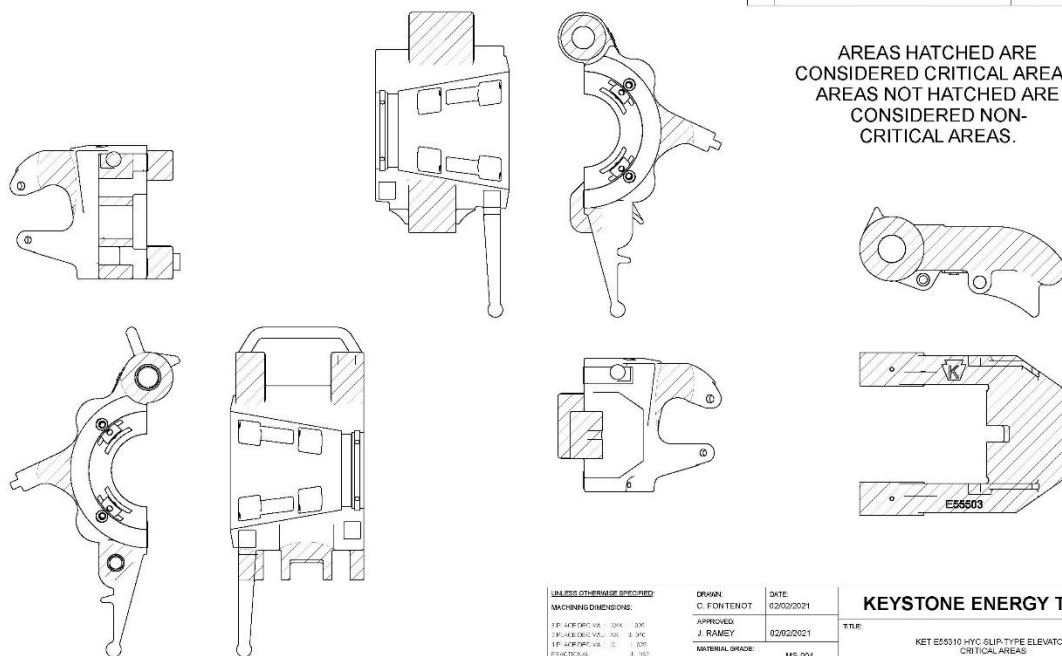

REVISIONS			
REV.	DESCRIPTION:	DATE:	APPROVED:
0	INITIAL RELEASE.	02/02/2021	J. RAMEY

AREAS HATCHED ARE
CONSIDERED CRITICAL AREAS.
AREAS NOT HATCHED ARE
CONSIDERED NON-
CRITICAL AREAS.


UNLESS OTHERWISE SPECIFIED:		DRAWN:	DATE:
MACHINING DIMENSIONS:		C. FONTENOT	02/02/2021
Fillet all DRG. V.A. - 10% .005		APPROVED:	
Surface DRG. V.A. - 10% .010		J. RAMEY	02/02/2021
Fillet all DRG. V.A. - 10% .010		MATERIAL GRADE:	MS-004
Fillet all DRG. V.A. - 10% .010			
ALL DIMENSIONS ARE IN INCHES.		MATERIAL HARDNESS:	BHN 200-310
		WEIGHT:	..

KEYSTONE ENERGY TOOLS

TITLE KET E55310 HYC SLIP-TYPE ELEVATOR
CRITICAL AREAS

SIZE: B	PSCM NO. 337-385-4458	DWG NO. E55310-C	REV. 0
SCALE: ..		SHEET	1 OF 1

MActive Duxto/Elevators® Series E5510, HYCE55003, HYC Latch E55508, HyClatch AD, PRT

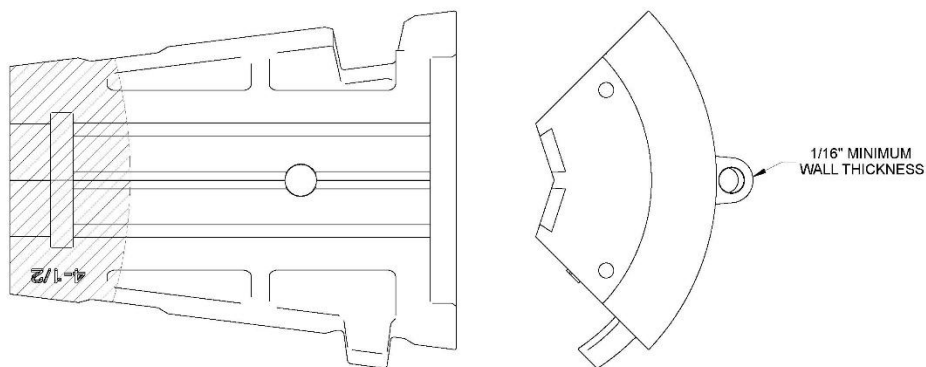

AREAS HATCHED ARE
CONSIDERED CRITICAL AREAS.
AREAS NOT HATCHED ARE
CONSIDERED NON-
CRITICAL AREAS.

REVISIONS			
REV.	DESCRIPTION:	DATE:	APPROVED:
0	INITIAL RELEASE.	02/02/2021	J RAMEY

UNLESS OTHERWISE SPECIFIED:		DRAWN:	DATE:
MACHINING DIMENSIONS:		C. F. FONTENOT	02/02/2021
2.3149 DRG. NO. 10K 1.005		APPROVED:	
2.3149 JUC. NO. 2.00		J. RAMEY	02/02/2021
2.3149 DRG. NO. 1.00		INTERVAL GRADE:	MS-004
WATER: 0.00L			
ALL DIMENSIONS ARE IN INCHES.			
*IF INFORMATION CONTAINS IMPERFECT INFORMATION AND IS FOR ANY PURPOSE NOT BE DISCLOSED TO OTHERS FOR ANY PURPOSE		MATERIAL HARDNESS:	EBH 280-315
WATER: 0.00L		WEIGHT:	00
WATER: 0.00L			

KEYSTONE ENERGY TOOLS


KET HYC SUP-SEGMENT
CRITICAL AREAS

SIZE: B	FROM NO. 337-385-4450	DWG NO. E55511-C	REV. 0
SCALE: --		SHEET 1 OF 1	

M1Active Driving/Elevators/Y-Safe/E53318 HYCFor RendaingA 5 HYC Stop Segment for Rendaing AD PR

6.0 Technical Drawings

*NOTE – PAINT CAN NOT EXCEED A THICKNESS OF 0.2mm


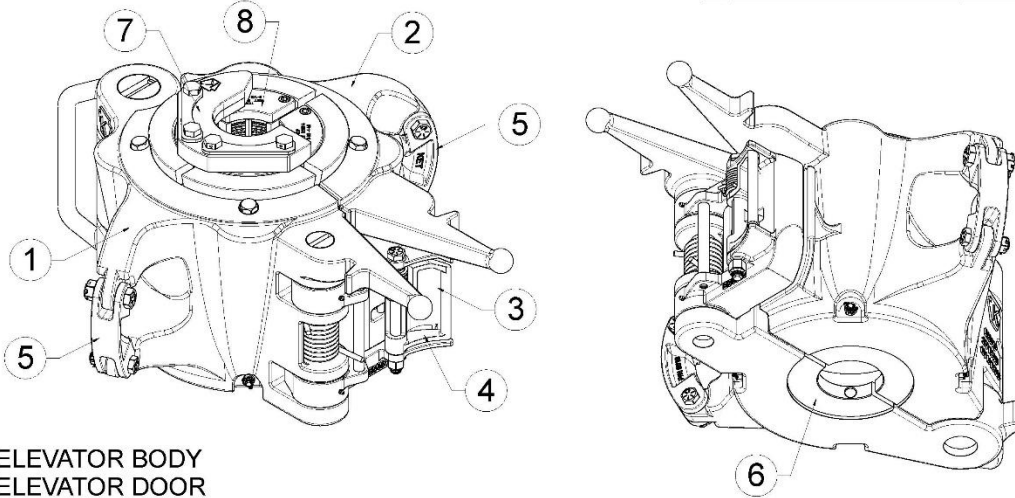


1. ELEVATOR BODY
2. ELEVATOR DOOR
3. LATCH
4. LATCH LOCK
5. LINK BLOCK
6. BOTTOM GUIDE PLATE (x2)
7. SETTING RING
8. SLIP ASSEMBLY (x4)

UNLESS OTHERWISE SPECIFIED:
MACHINING DIMENSIONS:
FRACTIONAL DECIMALS - 1/32, 1/16, 1/8, 1/4, 1/2, 3/4, 1, 1 1/2, 2, 3, 4, 5, 6, 8, 10, 12, 14, 16, 18, 20, 22, 24, 26, 28, 30, 32, 34, 36, 38, 40, 42, 44, 46, 48, 50, 52, 54, 56, 58, 60, 62, 64, 66, 68, 70, 72, 74, 76, 78, 80, 82, 84, 86, 88, 90, 92, 94, 96, 98, 100, 102, 104, 106, 108, 110, 112, 114, 116, 118, 120, 122, 124, 126, 128, 130, 132, 134, 136, 138, 140, 142, 144, 146, 148, 150, 152, 154, 156, 158, 160, 162, 164, 166, 168, 170, 172, 174, 176, 178, 180, 182, 184, 186, 188, 190, 192, 194, 196, 198, 200, 202, 204, 206, 208, 210, 212, 214, 216, 218, 220, 222, 224, 226, 228, 230, 232, 234, 236, 238, 240, 242, 244, 246, 248, 250, 252, 254, 256, 258, 260, 262, 264, 266, 268, 270, 272, 274, 276, 278, 280, 282, 284, 286, 288, 290, 292, 294, 296, 298, 300, 302, 304, 306, 308, 310, 312, 314, 316, 318, 320, 322, 324, 326, 328, 330, 332, 334, 336, 338, 340, 342, 344, 346, 348, 350, 352, 354, 356, 358, 360, 362, 364, 366, 368, 370, 372, 374, 376, 378, 380, 382, 384, 386, 388, 390, 392, 394, 396, 398, 400, 402, 404, 406, 408, 410, 412, 414, 416, 418, 420, 422, 424, 426, 428, 430, 432, 434, 436, 438, 440, 442, 444, 446, 448, 450, 452, 454, 456, 458, 460, 462, 464, 466, 468, 470, 472, 474, 476, 478, 480, 482, 484, 486, 488, 490, 492, 494, 496, 498, 500, 502, 504, 506, 508, 510, 512, 514, 516, 518, 520, 522, 524, 526, 528, 530, 532, 534, 536, 538, 540, 542, 544, 546, 548, 550, 552, 554, 556, 558, 560, 562, 564, 566, 568, 570, 572, 574, 576, 578, 580, 582, 584, 586, 588, 590, 592, 594, 596, 598, 600, 602, 604, 606, 608, 610, 612, 614, 616, 618, 620, 622, 624, 626, 628, 630, 632, 634, 636, 638, 640, 642, 644, 646, 648, 650, 652, 654, 656, 658, 660, 662, 664, 666, 668, 670, 672, 674, 676, 678, 680, 682, 684, 686, 688, 690, 692, 694, 696, 698, 700, 702, 704, 706, 708, 710, 712, 714, 716, 718, 720, 722, 724, 726, 728, 730, 732, 734, 736, 738, 740, 742, 744, 746, 748, 750, 752, 754, 756, 758, 760, 762, 764, 766, 768, 770, 772, 774, 776, 778, 780, 782, 784, 786, 788, 790, 792, 794, 796, 798, 800, 802, 804, 806, 808, 810, 812, 814, 816, 818, 820, 822, 824, 826, 828, 830, 832, 834, 836, 838, 840, 842, 844, 846, 848, 850, 852, 854, 856, 858, 860, 862, 864, 866, 868, 870, 872, 874, 876, 878, 880, 882, 884, 886, 888, 890, 892, 894, 896, 898, 900, 902, 904, 906, 908, 910, 912, 914, 916, 918, 920, 922, 924, 926, 928, 930, 932, 934, 936, 938, 940, 942, 944, 946, 948, 950, 952, 954, 956, 958, 960, 962, 964, 966, 968, 970, 972, 974, 976, 978, 980, 982, 984, 986, 988, 990, 992, 994, 996, 998, 1000, 1002, 1004, 1006, 1008, 1010, 1012, 1014, 1016, 1018, 1020, 1022, 1024, 1026, 1028, 1030, 1032, 1034, 1036, 1038, 1040, 1042, 1044, 1046, 1048, 1050, 1052, 1054, 1056, 1058, 1060, 1062, 1064, 1066, 1068, 1070, 1072, 1074, 1076, 1078, 1080, 1082, 1084, 1086, 1088, 1090, 1092, 1094, 1096, 1098, 1100, 1102, 1104, 1106, 1108, 1110, 1112, 1114, 1116, 1118, 1120, 1122, 1124, 1126, 1128, 1130, 1132, 1134, 1136, 1138, 1140, 1142, 1144, 1146, 1148, 1150, 1152, 1154, 1156, 1158, 1160, 1162, 1164, 1166, 1168, 1170, 1172, 1174, 1176, 1178, 1180, 1182, 1184, 1186, 1188, 1190, 1192, 1194, 1196, 1198, 1200, 1202, 1204, 1206, 1208, 1210, 1212, 1214, 1216, 1218, 1220, 1222, 1224, 1226, 1228, 1230, 1232, 1234, 1236, 1238, 1240, 1242, 1244, 1246, 1248, 1250, 1252, 1254, 1256, 1258, 1260, 1262, 1264, 1266, 1268, 1270, 1272, 1274, 1276, 1278, 1280, 1282, 1284, 1286, 1288, 1290, 1292, 1294, 1296, 1298, 1300, 1302, 1304, 1306, 1308, 1310, 1312, 1314, 1316, 1318, 1320, 1322, 1324, 1326, 1328, 1330, 1332, 1334, 1336, 1338, 1340, 1342, 1344, 1346, 1348, 1350, 1352, 1354, 1356, 1358, 1360, 1362, 1364, 1366, 1368, 1370, 1372, 1374, 1376, 1378, 1380, 1382, 1384, 1386, 1388, 1390, 1392, 1394, 1396, 1398, 1400, 1402, 1404, 1406, 1408, 1410, 1412, 1414, 1416, 1418, 1420, 1422, 1424, 1426, 1428, 1430, 1432, 1434, 1436, 1438, 1440, 1442, 1444, 1446, 1448, 1450, 1452, 1454, 1456, 1458, 1460, 1462, 1464, 1466, 1468, 1470, 1472, 1474, 1476, 1478, 1480, 1482, 1484, 1486, 1488, 1490, 1492, 1494, 1496, 1498, 1500, 1502, 1504, 1506, 1508, 1510, 1512, 1514, 1516, 1518, 1520, 1522, 1524, 1526, 1528, 1530, 1532, 1534, 1536, 1538, 1540, 1542, 1544, 1546, 1548, 1550, 1552, 1554, 1556, 1558, 1560, 1562, 1564, 1566, 1568, 1570, 1572, 1574, 1576, 1578, 1580, 1582, 1584, 1586, 1588, 1590, 1592, 1594, 1596, 1598, 1600, 1602, 1604, 1606, 1608, 1610, 1612, 1614, 1616, 1618, 1620, 1622, 1624, 1626, 1628, 1630, 1632, 1634, 1636, 1638, 1640, 1642, 1644, 1646, 1648, 1650, 1652, 1654, 1656, 1658, 1660, 1662, 1664, 1666, 1668, 1670, 1672, 1674, 1676, 1678, 1680, 1682, 1684, 1686, 1688, 1690, 1692, 1694, 1696, 1698, 1700, 1702, 1704, 1706, 1708, 1710, 1712, 1714, 1716, 1718, 1720, 1722, 1724, 1726, 1728, 1730, 1732, 1734, 1736, 1738, 1740, 1742, 1744, 1746, 1748, 1750, 1752, 1754, 1756, 1758, 1760, 1762, 1764, 1766, 1768, 1770, 1772, 1774, 1776, 1778, 1780, 1782, 1784, 1786, 1788, 1790, 1792, 1794, 1796, 1798, 1800, 1802, 1804, 1806, 1808, 1810, 1812, 1814, 1816, 1818, 1820, 1822, 1824, 1826, 1828, 1830, 1832, 1834, 1836, 1838, 1840, 1842, 1844, 1846, 1848, 1850, 1852, 1854, 1856, 1858, 1860, 1862, 1864, 1866, 1868, 1870, 1872, 1874, 1876, 1878, 1880, 1882, 1884, 1886, 1888, 1890, 1892, 1894, 1896, 1898, 1900, 1902, 1904, 1906, 1908, 1910, 1912, 1914, 1916, 1918, 1920, 1922, 1924, 1926, 1928, 1930, 1932, 1934, 1936, 1938, 1940, 1942, 1944, 1946, 1948, 1950, 1952, 1954, 1956, 1958, 1960, 1962, 1964, 1966, 1968, 1970, 1972, 1974, 1976, 1978, 1980, 1982, 1984, 1986, 1988, 1990, 1992, 1994, 1996, 1998, 2000, 2002, 2004, 2006, 2008, 2010, 2012, 2014, 2016, 2018, 2020, 2022, 2024, 2026, 2028, 2030, 2032, 2034, 2036, 2038, 2040, 2042, 2044, 2046, 2048, 2050, 2052, 2054, 2056, 2058, 2060, 2062, 2064, 2066, 2068, 2070, 2072, 2074, 2076, 2078, 2080, 2082, 2084, 2086, 2088, 2090, 2092, 2094, 2096, 2098, 2100, 2102, 2104, 2106, 2108, 2110, 2112, 2114, 2116, 2118, 2120, 2122, 2124, 2126, 2128, 2130, 2132, 2134, 2136, 2138, 2140, 2142, 2144, 2146, 2148, 2150, 2152, 2154, 2156, 2158, 2160, 2162, 2164, 2166, 2168, 2170, 2172, 2174, 2176, 2178, 2180, 2182, 2184, 2186, 2188, 2190, 2192, 2194, 2196, 2198, 2200, 2202, 2204, 2206, 2208, 2210, 2212, 2214, 2216, 2218, 2220, 2222, 2224, 2226, 2228, 2230, 2232, 2234, 2236, 2238, 2240, 2242, 2244, 2246, 2248, 2250, 2252, 2254, 2256, 2258, 2260, 2262, 2264, 2266, 2268, 2270, 2272, 2274, 2276, 2278, 2280, 2282, 2284, 2286, 2288, 2290, 2292, 2294, 2296, 2298, 2300, 2302, 2304, 2306, 2308, 2310, 2312, 2314, 2316, 2318, 2320, 2322, 2324, 2326, 2328, 2330, 2332, 2334, 2336, 2338, 2340, 2342, 2344, 2346, 2348, 2350, 2352, 2354, 2356, 2358, 2360, 2362, 2364, 2366, 2368, 2370, 2372, 2374, 2376, 2378, 2380, 2382, 2384, 2386, 2388, 2390, 2392, 2394, 2396, 2398, 2400, 2402, 2404, 2406, 2408, 2410, 2412, 2414, 2416, 2418, 2420, 2422, 2424, 2426, 2428, 2430, 2432, 2434, 2436, 2438, 2440, 2442, 2444, 2446, 2448, 2450, 2452, 2454, 2456, 2458, 2460, 2462, 2464, 2466, 2468, 2470, 2472, 2474, 2476, 2478, 2480, 2482, 2484, 2486, 2488, 2490, 2492, 2494, 2496, 2498, 2500, 2502, 2504, 2506, 2508, 2510, 2512, 2514, 2516, 2518, 2520, 2522, 2524, 2526, 2528, 2530, 2532, 2534, 2536, 2538, 2540, 2542, 2544, 2546, 2548, 2550, 2552, 2554, 2556, 2558, 2560, 2562, 2564, 2566, 2568, 2570, 2572, 2574, 2576, 2578, 2580, 2582, 2584, 2586, 2588, 2590, 2592, 2594, 2596, 2598, 2600, 2602, 2604, 2606, 2608, 2610, 2612, 2614, 2616, 2618, 2620, 2622, 2624, 2626, 2628, 2630, 2632, 2634, 2636, 2638, 2640, 2642, 2644, 2646, 2648, 2650, 2652, 2654, 2656, 2658, 2660, 2662, 2664, 2666, 2668, 2670, 2672, 2674, 2676, 2678, 2680, 2682, 2684, 2686, 2688, 2690, 2692, 2694, 2696, 2698, 2700, 2702, 2704, 2706, 2708, 2710, 2712, 2714, 2716, 2718, 2720, 2722, 2724, 2726, 2728, 2730, 2732, 2734, 2736, 2738, 2740, 2742, 2744, 2746, 2748, 2750, 2752, 2754, 2756, 2758, 2760, 2762, 2764, 2766, 2768, 2770, 2772, 2774, 2776, 2778, 2780, 2782, 2784, 2786, 2788, 2790, 2792, 2794, 2796, 2798, 2800, 2802, 2804, 2806, 2808, 2810, 2812, 2814, 2816, 2818, 2820, 2822, 2824, 2826, 2828, 2830, 2832, 2834, 2836, 2838, 2840, 2842, 2844, 2846, 2848, 2850, 2852, 2854, 2856, 2858, 2860, 2862, 2864, 2866, 2868, 2870, 2872, 2874, 2876, 2878, 2880, 2882, 2884, 2886, 2888, 2890, 2892, 2894, 2896, 2898, 2900, 2902, 2904, 2906, 2908, 2910, 2912, 2914, 2916, 2918, 2920, 2922, 2924, 2926, 2928, 2930, 2932, 2934, 2936, 2938, 2940, 2942, 2944, 2946, 2948, 2950, 2952, 2954, 2956, 2958, 2960, 2962, 2964, 2966, 2968, 2970, 2972, 2974, 2976, 2978, 2980, 2982, 2984, 2986, 2988, 2990, 2992, 2994, 2996, 2998, 3000, 3002, 3004, 3006, 3008, 3010, 3012, 3014, 3016, 3018, 3020, 3022, 3024, 3026, 3028, 3030, 3032, 3034, 3036, 3038, 3040, 3042, 3044, 3046, 3048, 3050, 3052, 3054, 3056, 3058, 3060, 3062, 3064, 3066, 3068, 3070, 3072, 3074, 3076, 3078, 3080, 3082, 3084, 3086, 3088, 3090, 3092, 3094, 3096, 3098, 3100, 3102, 3104, 3106, 3108, 3110, 3112, 3114, 3116, 3118, 3120, 3122, 3124, 3126, 3128, 3130, 3132, 3134, 3136, 3138, 3140, 3142, 3144, 3146, 3148, 3150, 3152, 3154, 3156, 3158, 3160, 3162, 3164, 3166, 3168, 3170, 3172, 3174, 3176, 3178, 3180, 3182, 3184, 3186, 3188, 3190, 3192, 3194, 3196, 3198, 3200, 3202, 3204, 3206, 3208, 3210, 3212, 3214, 3216, 3218, 3220, 3222, 3224, 3226, 3228, 3230, 3232, 3234, 3236, 3238, 3240, 3242, 3244, 3246, 3248, 3250, 3252, 3254, 3256, 3258, 3260, 3262, 3264, 3266, 3268, 3270, 3272, 3274, 3276, 3278, 3280, 3282, 3284, 3286, 3288, 3290, 3292, 3294, 3296, 3298, 3300, 3302, 3304, 3306, 3308, 3310, 3312, 3314, 3316, 3318, 3320, 3322, 3324, 3326, 3328, 3330, 3332, 3334, 3336, 3338, 3340, 3342, 3344, 3346, 3348, 3350, 3352, 3354, 3356, 3358, 3360, 3362, 3364, 3366, 3368, 3370, 3372, 3374, 3376, 3378, 3380, 3382, 3384, 3386, 3388, 3390, 3392, 3394, 3396, 3398, 3400, 3402, 3404, 3406, 3408, 3410, 3412, 3414, 3416, 3418, 3420, 3422, 3424, 3426, 3428, 3430, 3432, 3434, 3436, 3438, 3440, 3442, 3444, 3446, 3448, 3450, 3452, 3454, 3456, 3458, 3460, 3462, 3464, 3466, 3468, 3470, 3472, 3474, 3476, 3478, 3480, 3482, 3484, 3486, 3488, 3490, 3492, 3494, 3496, 3498, 3500, 3502, 3504, 3506, 3508, 3510, 3512, 3514, 3516, 3518, 3520, 3522, 3524, 3526, 3528, 3530, 3532, 3534, 3536, 3538, 3540, 3542, 3544, 3546, 3548, 3550, 3552, 3554, 3556, 3558, 3560, 3562, 3564, 3566, 3568, 3570, 3572, 3574, 3576, 3578, 3580, 3582, 3584, 3586, 3588, 3590, 3592, 3594, 3596, 3598, 3600, 3602, 3604, 3606, 3608, 3610, 3612, 3614, 3616, 3618, 3620, 3622, 3624, 3626, 3628, 3630, 3632, 3634, 3636, 3638, 3640, 3642, 3644, 3646, 3648, 3650, 3652, 3654, 3656, 3658, 3660, 3662, 3664, 3666, 3668, 3670, 3672, 3674, 3676, 3678, 3680, 3682, 3684, 3686, 3688, 3690, 3692, 3694, 3696, 3698, 3700, 3702, 3704, 3706, 3708, 3710, 3712, 3714, 3716, 3718, 3720, 3722, 3724, 3726, 3728, 3730, 3732, 3734, 3736, 3738, 3740, 3742, 3744, 3746, 3748, 3750, 3752, 3754, 3756, 3758, 3760, 3762, 3764, 3766, 3768, 3770, 3772, 3774, 3776, 3778, 3780, 3782, 3784, 3786, 3788, 3790, 3792, 3794, 3796, 3798, 3800, 3802, 3804, 3806, 3808, 3810, 3812, 3814, 3816, 3818, 3820, 3822, 3824, 3826, 3828, 3830, 3832, 3834, 3836, 3838, 3840, 3842, 3844, 3846, 3848, 3850, 3852, 3854, 3856, 3858, 3860, 3862, 3864, 3866, 3868, 3870, 3872, 3874, 3876, 3878, 3880, 3882, 3884, 3886, 3888, 3890, 3892, 3894, 3896, 3898, 3900, 3902, 3904, 3906, 3908, 3910, 3912, 3914, 3916, 3918, 3920, 3922, 3924, 3926, 3928, 3930, 3932, 3934, 3936, 3938, 3940, 3942, 3944, 3946, 3948, 3950, 3952, 3954, 3956, 3958, 3960, 3962, 3964, 3966, 3968, 3970, 3972, 3974, 3976, 3978, 3980, 3982, 3984, 3986, 3988, 3990, 3992, 3994, 3996, 3998, 4000, 4002, 4004, 4006, 4008, 4010, 4012, 4014, 4016, 4018, 4020, 4022, 4024, 4026, 4028, 4030, 4032, 4034, 4036, 4038, 4040, 4042, 4044, 4046, 4048, 4050, 4052, 4054, 4056, 4058, 4060, 4062, 4064, 4066, 4068, 4070, 4072, 4074, 4076, 4078, 4080, 4082, 4084, 4086, 4088, 4090, 4092, 4094, 4096, 4098, 4100, 4102, 4104, 4106, 4108, 4110, 4112, 4114, 4116, 4118, 4120, 4122, 4124, 4126, 4128, 4130, 4132, 4134, 4136, 4138, 4140, 4142, 4144, 4146, 4148,

6.0 Technical Drawings

*NOTE – PAINT CAN NOT EXCEED A THICKNESS OF 0.2mm

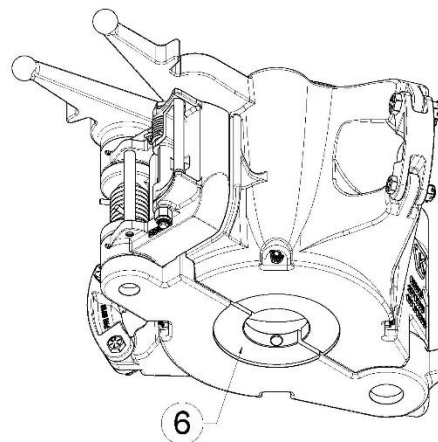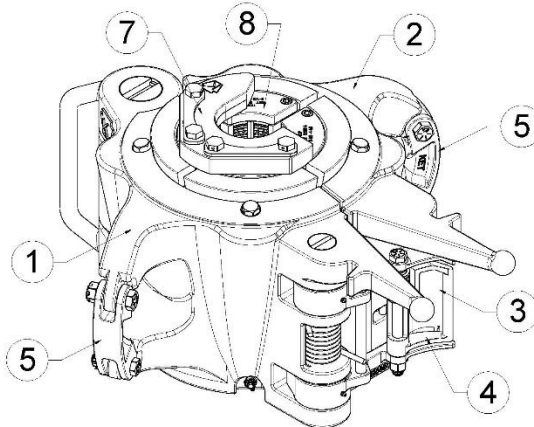

1. ELEVATOR BODY
2. ELEVATOR DOOR
3. LATCH
4. LATCH LOCK
5. LINK BLOCK
6. BOTTOM GUIDE PLATE (x2)
7. SETTING RING
8. SLIP ASSEMBLY (x4)



UNLESS OTHERWISE SPECIFIED:
MACHINING DIMENSIONS:
3 PL. ACR DRC VAL: 100. ± 0.05
3 PL. SS DRC VAL: 20. ± 0.05
1 PL. SS DRC VAL: 30. ± 0.05
FRACTIONAL: ± 0.02
ALL DIMENSIONS ARE IN INCHES

DRAMA:	DATE:
C. FONTENOT	02/01/2021
APPROVED:	
J. RAMEY	02/01/2021
MATERIAL GRADE:	..
MATERIAL HARDNESS:	..
WEIGHT:	1.300 LB.
	APPROX

KEYSTONE ENERGY TOOLS

KET E55310 HYC SLIP-TYPE ELEVATOR MAIN COMPONENTS		
ITEM NO.	DESCRIPTION	QTY
1	337-365-1456	E55310-A

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
0	INITIAL RELEASE.	02/01/2021	J. RAMEY

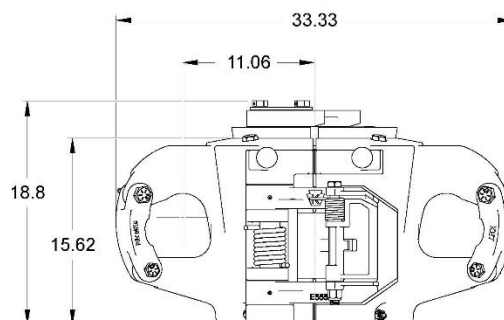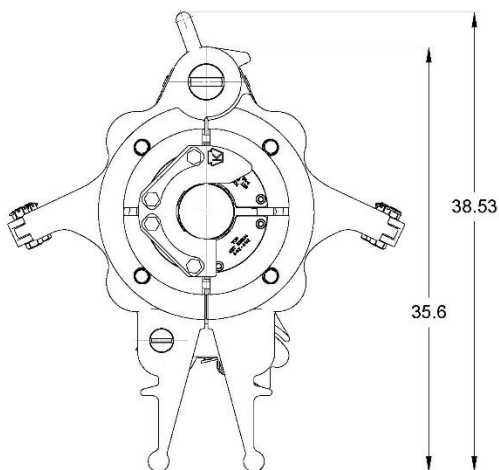

UNLESS OTHERWISE SPECIFIED:
MACHINING DIMENSIONS:
2 PL. ACR THRO VAL: 100 ± 0.05
2 PL. ACR DISC W/L: 201 ± 0.01
1 PL. ACR DISC W/L: 21 ± 0.02
FRACTIONAL: ± 1/32
ALL DIMENSIONS ARE IN INCHES

DRAMA:	DATE:
C. FONTENOT	02/01/2021
APPROVED:	
J. RAMEY	02/01/2021
MATERIAL GRADE:	..
MATERIAL HARDNESS:	..
WEIGHT:	1.300 LB.
	APPROX


KEYSTONE ENERGY TOOLS

KET E55310 HYC SLIP-TYPE ELEVATOR APPROXIMATE SIZE DIMENSIONS			
SIZE B	FSCMNO. 337-385-4458	DWGNO.	E55310-D

Not for Distribution/Exclusion/Release Series#55510 H/C For Bandwidth/H/C for Bandwidth AD: ASD

6.0 Technical Drawings


1. SLIP SEGMENT
2. INSERT RETAINER
3. INSERT (x6)
4. INSERT (x9)
5. INSERT (x12)

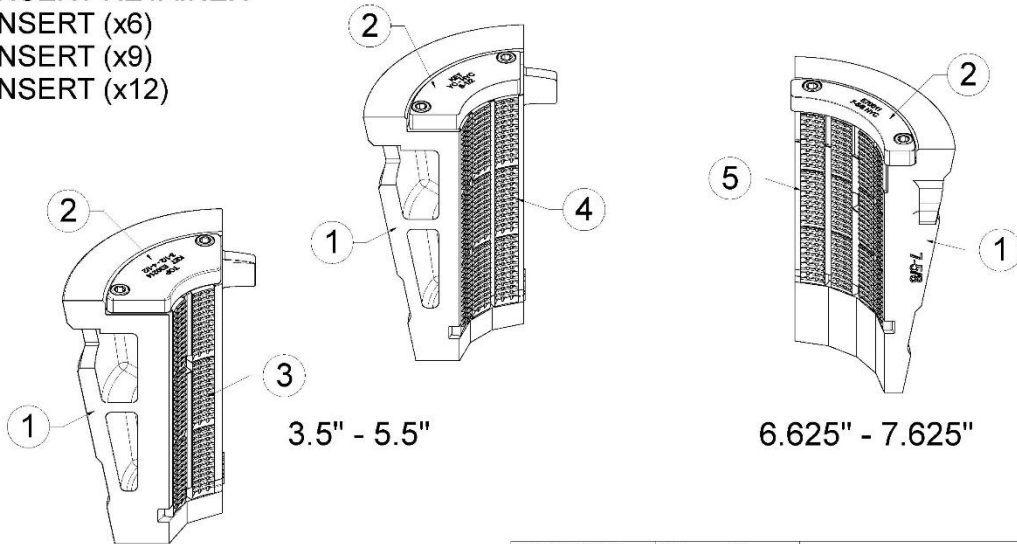

UNLESS OTHERWISE SPECIFIED:		DRAWN:	DATE:	KEYSTONE ENERGY TOOLS	
MACHINING DIMENSIONS:		C. FONTENOT	02/01/2021	TITLE:	
3. PLACE THE HOLE IN THE 1/8"		APPROVED:		KET HYLIC SLP SEGMENT MAIN COMPONENTS	
4. PLACE THE HOLE IN THE 1/8"		J. RAMEY	02/01/2021		
5. PLACE THE HOLE IN THE 1/8"		MATERIAL SPEC:	--		
6. PLACE THE HOLE IN THE 1/8"			--		
ALL DIMENSIONS IN INCHES.		MATERIAL FINISH:	--		
HATCHING: 45 DEGREE FOR HOLLOW AREAS		WEIGHT:	--		
HATCHING: 90 DEGREE FOR SOLID AREAS			--		
HATCHING: 135 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 225 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 315 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 405 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 495 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 585 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 675 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 765 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 855 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 945 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1035 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1125 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1215 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1305 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1395 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1485 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1575 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1665 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1755 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1845 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 1935 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2025 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2115 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2205 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2295 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2385 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2475 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2565 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2655 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2745 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2835 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 2925 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3015 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3105 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3195 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3285 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3375 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3465 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3555 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3645 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3735 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3825 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 3915 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4005 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 4995 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5085 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5175 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5265 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5355 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5445 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5535 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5625 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5715 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5805 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5895 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 5985 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6075 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6165 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6255 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6345 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6435 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6525 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6615 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6705 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6795 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6885 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 6975 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7065 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7155 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7245 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7335 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7425 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7515 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7605 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7695 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7785 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7875 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 7965 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8055 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8145 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8235 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8325 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8415 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8505 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8595 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8685 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8775 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8865 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 8955 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9045 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9135 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9225 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9315 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9405 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9495 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9585 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9675 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9765 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9855 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 9945 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10035 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10125 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10215 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10305 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10395 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10485 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10575 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10665 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10755 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10845 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 10935 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11025 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11115 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11205 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11295 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11385 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11475 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11565 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11655 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11745 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11835 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 11925 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12015 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12105 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12195 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12285 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12375 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12465 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12555 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12645 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12735 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12825 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 12915 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13005 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 13905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 14905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 15905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 16905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 17905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 18905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 19905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 20905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 21905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 22905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23365 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23455 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23545 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23635 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23725 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23815 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 23905 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 24000 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 24095 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 24185 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 24275 DEGREE FOR HOLLOW AREAS			--		
HATCHING: 24365 DEGREE FOR HOLLOW AREAS		</			

7.0 HYC Slip Type Elevator & Assemblies

PART NUMBER	DESCRIPTION	SIZE OF LINKS	WEIGHT(lbs.)
E55310	HYC ELEVATOR LESS SLIP ASSEMBLY	2-1/4" - 3-1/2"	1300.00

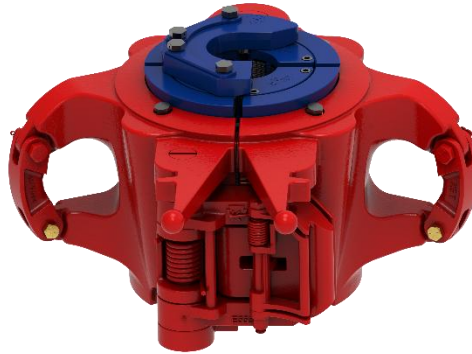

HYC SLIP ASSEMBLIES

PART NUMBER	DESCRIPTION	WEIGHT(lbs.)
E55509-2	4 1/2" X 3 1/2" HYC SLIP ASSEMBLY	300.00
E55510-2	4 1/2" X 4" HYC SLIP ASSEMBLY	300.00
E55511-2	4 1/2" X 4 1/2" HYC SLIP ASSEMBLY	300.00
E55512-2	5 1/2" X 5" HYC SLIP ASSEMBLY	300.00
E55513-2	5 1/2" X 5 1/2" HYC SLIP ASSEMBLY	300.00
E55514-2	7" X 6 5/8" HYC SLIP ASSEMBLY	265.00
E55515-2	7" X 7" HYC SLIP ASSEMBLY	265.00
E70009	7" X 7 5/8" HYC SLIP ASSY.	265.00
E55511-1	4 1/2" HYC SLIP SEGMENTS ONLY (MATCHED SET OF 4)	250.00
E55513-1	5 1/2" HYC SLIP SEGMENTS ONLY (MATCHED SET OF 4)	230.00
E55515-1	7" HYC SLIP SEGMENT ONLY (MATCHED SET OF 4)	200.00
E70009-1	7 5/8" HYC SLIP SEGMENTS ONLY (MATCHED SET OF 4)	200.00

HYC SETTING RINGS


PART NUMBER	DESCRIPTION	# REQ.	WEIGHT(lbs.)
E70012	7 5/8" HYC SETTING RING	1	11.00
E55522	7" HYC SETTING RING	1	11.50
E55521	6 5/8" HYC SETTING RING	1	12.00
E55520	5 1/2" HYC SETTING RING	1	13.00
E55519	5" HYC SETTING RING	1	14.50
E55518	4 1/2" HYC SETTING RING	1	15.00
E55517	4" HYC SETTING RING	1	16.50
E55516	3 1/2" HYC SETTING RING	1	18.00

HYC BOTTOM GUIDE PLATES

PART NUMBER	DESCRIPTION	# REQ.	WEIGHT(lbs.)
E24071-6	7 5/8" BOTTOM GUIDE PLATE	1	5.02
E24071-2	7" BOTTOM GUIDE PLATE	1	3.75
E24071-3	6 5/8" BOTTOM GUIDE PLATE	1	4.50
E24071-1	5 1/2" BOTTOM GUIDE PLATE	1	5.50
E24071	5" BOTTOM GUIDE PLATE	1	7.75
E24071-4	4 1/2" BOTTOM GUIDE PLATE	1	8.50
E26827	4" BOTTOM GUIDE PLATE	1	8.50
E26827-1	3 1/2" BOTTOM GUIDE PLATE	1	8.00

Keystone ENERGY TOOLS

8.0 HYC Replacement Parts

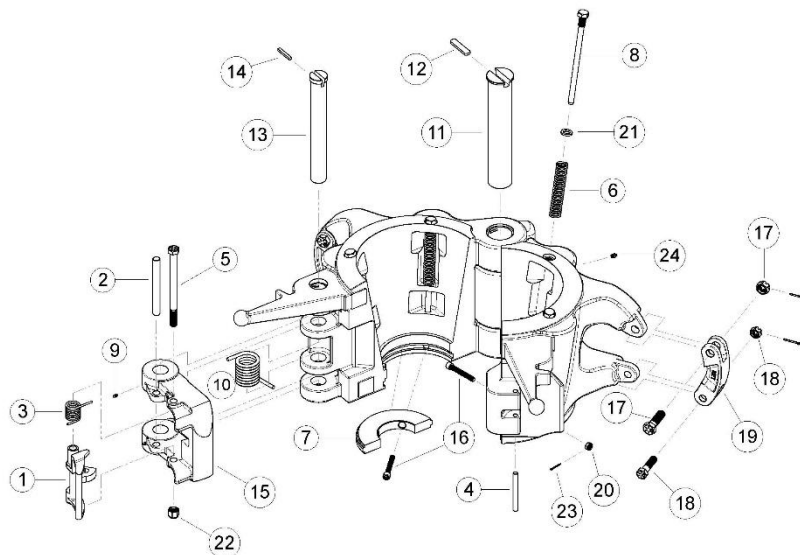


REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED:
0	INITIAL RELEASE.	02/02/2021	J. RAMEY

[illegible]

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	E13152	LATCH LOCK	1
2	E13185	SPRING STOP PIN	1
3	E13188	LATCH LOCK SPRING	1
4	E13190	DOOR LUG PIN	1
5	E15101	LATCH LOCK BOLT	1
6	E945044-2	SLIP SPRING	4
7	BOTTOM GUIDE PLATE	SEE CHART ON PAGE 14	
8	E24076	SLIP BOLT	4
9	E940308-1	GREASE ZERT F/LATCH	2
10	E34909	LATCH SPRING	1
11	E55311	HINGE PIN	1
12	E55504	HINGE PIN RETAINER	1
13	E55312	LATCH PIN	1
14	E55505	LATCH PIN RETAINER	1
15	N/A	N/A	N/A
16	E55508	BOTTOM GUIDE PLATE BOLTS	4
17	E8145-1	UPPER LINK BLOCK BOLT, NUT, & COTTER	2
18	E8145-2	LOWER LINK BLOCK BOLT, NUT, & COTTER	2
19	E9519	LINK BLOCK	2
20	E939484-5	CASTLE NUT F/GUIDE PLATE BOLT	4
21	E939354-6	LOCK WASHER FOR SLIP BOLT	4
22	E8150	LOCK NUT F/LATCH LOCK BOLT	1
23	E939672-17	COTTER PIN F/CASTLE NUT ON GUIDE PLATE BOLT	4
24	E940308-1	GREASE ZERT F/HINGE	1

Keystone ENERGY TOOLS

8.0 YC Slip Replacement Parts

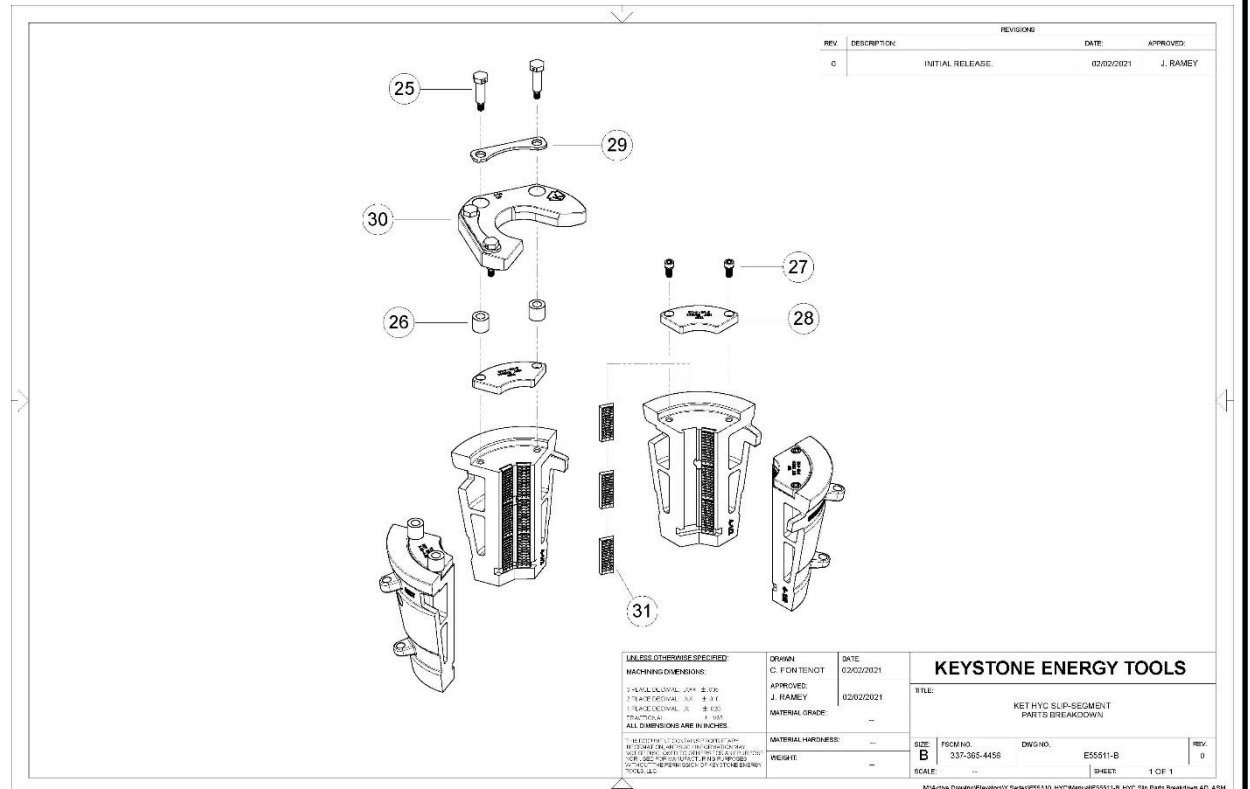

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
25	E55501	SETTING PLATE BOLT	4
26	E55502	RUBBER BUSHING	4
27	E941271-73	INSERT RETAINER SCREWS	4
28	E70011	7 5/8" INSERT RETAINER	4
28	E30230	7" INSERT RETAINER	4
28	E30224	5 1/2" INSERT RETAINER	4
28	E30214	4 1/2" - 3 1/2" INSERT RETAINER	4
29	E30216	SETTING RING RETAINER (3 1/2" - 7")	2
29	E70147	SETTING RING RETAINER (7 5/8")	2
30	SETTING PLATE	SEE CHART ON PAGE 14	1

INSERTS

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
31	E16408	4 1/2" X 4 1/2" BASIC INSERT	16
31	E16407	5 1/2" - 7 5/8" BASIC INSERT	16
31	E24781	4 1/2" X 4" YC INSERT	16
31	E24779	4 1/2" X 3 1/2" YC INSERT	16
31	E24783	5 1/2" X 5" YC INSERT	16
31	E24785	5 1/2" X 4 1/2" YC INSERT	16
31	E24748	7" X 6 5/8" YC INSERT	24

Keystone ENERGY TOOLS

9.0 YC Wear Data

PART NUMBER	E55310
RATED CAPACITY	200 TON

STANDARD PINS

HINGE PIN PART #	E55311
TOTAL CLEARANCE(H)	0.045
HINGE PIN MIN. DIA. NEW	2.869
BORE DIA.MAX. NEW	2.878
BORE DIA.MAX.WORN	2.900

LATCH PIN PART #	E55312
TOTAL CLEARANCE(L)	0.045
LATCH PIN MIN. DIA. NEW	1.745
BORE DIA.MAX.NEW	1.752
BORE DIA.MAX.WORN	1.775

1/16" OVERSIZE PINS

HINGE PIN PART #	E55311-06
TOTAL CLEARANCE(H)	0.045
HINGE PIN MIN. DIA.	2.931
BORE DIA.MAX. NEW	2.940
BORE DIA.MAX.WORN	2.963

LATCH PIN PART #	E55312-06
TOTAL CLEARANCE(L)	0.045
LATCH PIN MIN. DIA.	1.994
BORE DIA.MAX.NEW	2.002
BORE DIA.MAX.WORN	2.025



1/8" OVERSIZE PINS

HINGE PIN PART #	E55311-12
TOTAL CLEARANCE(H)	0.045
HINGE PIN MIN. DIA. NEW	2.994
BORE DIA.MAX. NEW	3.002
BORE DIA.MAX.WORN	3.025


LATCH PIN PART #	E55312-12
TOTAL CLEARANCE(L)	0.045
LATCH PIN MIN. DIA. NEW	2.056
BORE DIA.MAX.NEW	2.065
BORE DIA.MAX.WORN	2.088

LIFTING EARS

DIMENSION (W) MIN	3.625
RADIUS -R	2.000
DIMENSION (M)	11.063

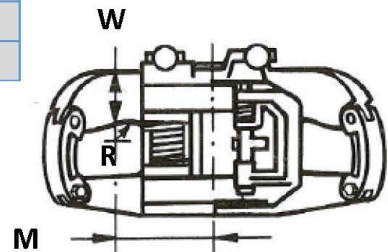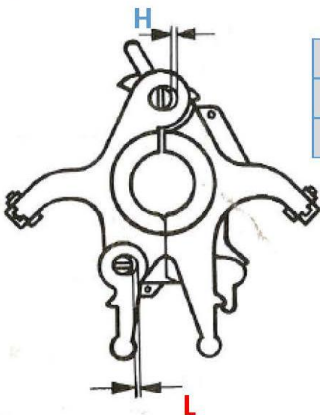

9.0 YC Wear Data

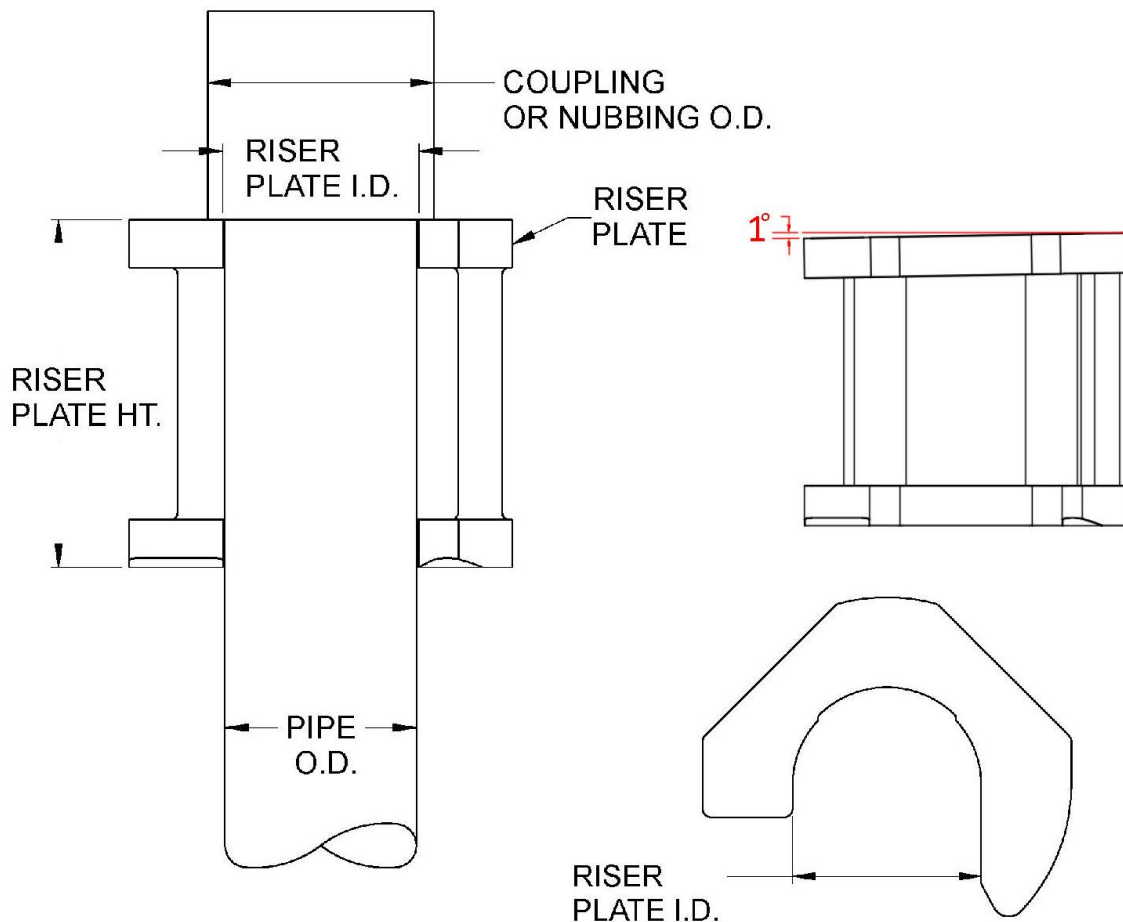

LIFT NUBBING OD, COUPLING OD, OR TJ OD – 0.250" = MAX SETTING RING ID

**APPLICABLE ON YC/HYC CONVENTIONAL OR RISER SETTING PLATE*

CONNECTION LENGTH OR UPSET LENGTH +0.250" = RISER PLATE HEIGHT

VERTICAL DISTURBANCE TOLERANCE = 1° FROM 90

NOTE—RISER SETTING PLATES ARE CONNECTION SPECIFIC AND ARE ENGRAVED WITH THE CONNECTION DATA NAME AND SIZE, INCLUDING WEIGHT, AND RISER SETTING PLATE ID

WARNING—Above wear data is for standard KET setting plates. Any custom size setting plates data may vary based on setting plate ID and pipe size. Always consult with a KET sales representative before making presumptions based on this data.

10.0 Reception, Storage, Transport & Decommissioning

Reception

Check the tool immediately after reception and re-preserve the tool as required (try to have this completed withing 1 month).

Any exposed or non painted metal surfaces should be coated with a rust preventative to prevent any corrosion build up.

Storage

The tool should be stored or palletized in a clean and dry place to avoid all environmental elements. It is recommended to store in an indoor environment of 60 – 70 Deg F with max humidity of 80%. If the tool is to be stored outdoor, then a cargo container would be appropriate to ensure the tool is not exposed to weather conditions.

Preserve the tool by greasing all areas defined in the maintenance requirements per the manual.

During storage, the tool shall still be inspected annually per inspection requirements in the user's manual.

Transport

When lifting the tool do so only by using its lifting ears only. The best way of transporting the tool is in its original palletized state. Ensure the tool is banded down accordingly to prevent the possibility of potential dropped objects and broken shipments.

Decommissioning

The tool may contain grease, steel, rubbers, plastic, stainless steel, mild steel and several assembled components with undefined consistency or mixtures. The tool can be contaminated with drilling fluids, hydraulic fluids and preservatives. After the tool is decommissioned, it is recommended to disassemble the tool in a place where waste fluids can be contained and properly disposed of.

⚠WARNING: any fluids, mud, or grease are potentially unsafe when in contact with the skin. Always wear gloves and safety goggles when disassembling the tool.

1. Clean the tool with a steam cleaner.
2. It is recommended to disassemble the tool in a place where drainage for waste fluids is possible.

CERTIFICATE OF WARRANTY AND GUARANTEE OF QUALITY

KET warrants all materials and products manufactured to be free from defects in material and workmanship, under normal use and service, when installed, used, and serviced in the manner provided and intended by the seller for a period of twelve (12) months after delivery. Seller's obligation under this warranty is expressly limited to repair or replacement, at its option, of any materials or products, returned to the seller's plant in New Iberia, Louisiana and which are determined by the seller to be defective. All freight charges for return and reshipment shall be paid by the customer. A new warranty period shall not be established for repaired or replaced material or products; such items shall remain under warranty only for the remainder of the warranty period on the original materials or products. This is the sole warranty of the seller and no other warranty is either expressed or implied, in fact or by law, including any warranty as to the merchantability or fitness for a particular use or purpose.

In case of goods or parts not wholly of seller's manufacture, seller shall make available to the customer whatever warranty or guarantee is extended to seller for such goods or parts by the supplier or manufacturer thereof.

Seller will not assume responsibility or liability for any repairs, rebuilding, welding or heat treating done to its material or products outside of seller's plant, such work shall void all warranties. All parts used in the manufacture and /or final assembly of seller's materials or products are necessary for both safety and operational performance. Omission of any part or failure to replace any worn part may result in the malfunction and a consequent safety hazard for which seller disclaims any responsibility or liability for injuries or damage as a result thereof.

Buyer's sole and only remedy in regard to any defective materials or products shall be the repair or replacement thereof as herein provided, and seller shall not be liable for any consequential, special, incidental or punitive damages resulting from or caused by any defective materials, products or supplies.



For more information, please contact us at:

Keystone Energy Tools
3711 Melancon Rd.
Broussard, LA 70518

www.k-e-t.com

Office: 1-337-365-4411
Fax: 1-337-365-4456

Revision History

Rev	Date	Changes	By
03	05/26/2021	Updated format/added rev history	Cody Haas
04	03/10/2022	Added page 11 figure 2 (wire tie illustration)	Cody Haas
05	07/19/2022	Updated address	Cody Haas
06	01/09/2023	Updated title page	Cody Haas
07	04/08/2024	Adding warning about shock loading	Cody Haas
08	08/29/2025	Added Setting Plate Wear Data	Cody Haas
09	11/19/2025	Added Pre & Post Job Inspection Checklist	Cody Haas
10	02/05/2026	Added NOTE-Load rating determined by Elevator body not slip	Cody Haas
11	07/10/2026	Added a new Figure 2 and Setting Plate movement illustration & instructions	Cody Haas
12	08/06/2026	Added range of min 18 ft-lb & max of 20 ft-lb for setting plate bolt torque values	Cody Haas
13	08/13/2026	Updated safety wire size from 3/32" to .032"	Cody Haas