



THE YC 75 TON SLIP TYPE ELEVATOR OPERATING PROCEDURE MANUAL

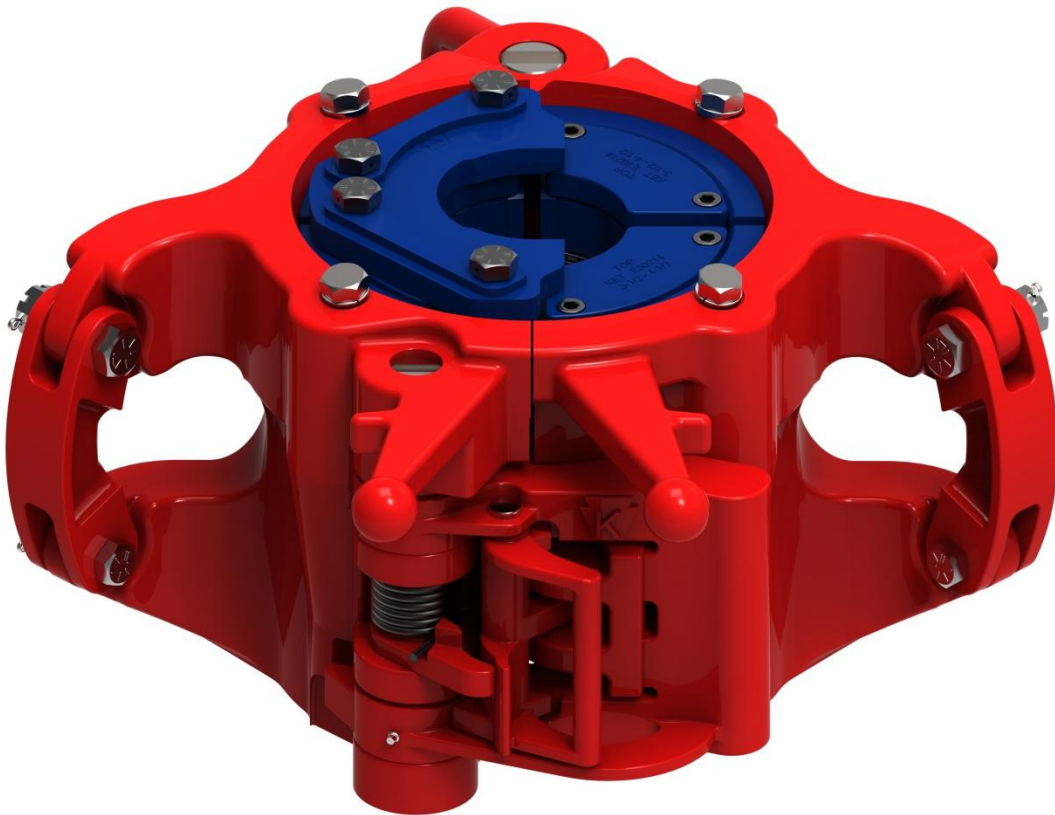


Table of Contents

Table of contents	2
Safety instructions	3
vertical vs horizontal lifts	3
Safety instructions	4
1.0 Introduction	5
Figure 1 – YC model chart	5
CE Marking	5
2.0 Installation	6
3.0 Operation	7
4.0 Maintenance & Inspection	8
Maintenance location drawing	9
5.0 Repair & critical areas	10-13
Figure 2 & Figure 3	12
Critical area map drawing	13
6.0 Technical drawings	14-15
7.0 YC elevator & assembly's	16
8.0 YC elevator replacement parts	17
8.0 YC slip replacement parts	18
9.0 YC elevator wear data	19
9.0 YC setting plate wear data	20
10.0 Reception, storage, transport, decommissioning	21
Certificate of warranty & guarantee of quality	22
Manufacture Information & Revision History	23

"YC" SERIES ELEVATOR

SAFETY INSTRUCTIONS

The most important safety device for this tool is **YOU**. Your good judgment is the best protection against injury.

⚠ WARNING



To reduce the risk of injury, everyone using, installing, performing maintenance, changing accessories on, or working near this tool must read and understand these instructions before performing any such task.

Operating Hazards

⚠WARNING: Do not overload the elevator. Overloading the recommended rating could cause series injury or death.

⚠WARNING: Check the latch for proper engagement. A malfunctioning latch could cause the elevator to unexpectedly unlatch or not latch at all and could result in injury or death.

⚠WARNING: Always insure that the elevator and slips are correct for the tubular it is to be used on. Failure to use the proper elevator and slips could result in injury or death.

⚠WARNING: Always ensure that the tool joint or collar O.D. of the pipe is correct. Failure to maintain adequate contact area could result in injury or death.

⚠WARNING: To prevent injury or elevator malfunction, inspect the elevator slips, inserts, setting plate, retainer plate, retainer screws, slip bolts, setting plate bolts, bushings, latch, hinge pin, and latch pin regularly for wear. Failure to inspect these parts could cause injury or death.

⚠WARNING: Do not use undersized pipe. Using undersized pipe could cause an inadequate load bearing area and uneven stress distribution. Both of which may result in injury or death.

⚠WARNING: Do not use the elevator if the latch or latch lock pin is malfunctioning. Latch or latch lock pin failure, may result in injury or death.


⚠WARNING: All warning labels attached to the equipment must be observed. The warning labels must be present on the tool. Do not remove the labels. If they are missing, replacing is mandatory.

⚠WARNING: The company operating the tool is responsible for issuing work instructions for safe and proper use of the equipment.

⚠WARNING: The operating company is responsible for verifying that any personnel operating, servicing, inspecting, or otherwise involved with the use of the tool must be properly trained correctly.

⚠WARNING: Do not use oversized pipe. Using oversized pipe could make it difficult or impossible to properly latch the elevator.

Vertical / Non-vertical Lifting

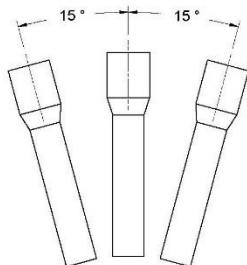

Vertical lifting is considered vertical $\pm 15^\circ$



Non-vertical lifting is considered $\leq 75^\circ$ as max. from horizon.

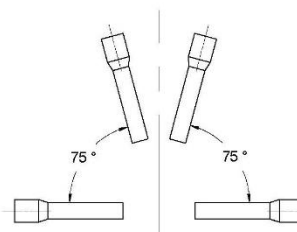


Figure 1

DO NOT DISCARD – GIVE TO USER

Keystone ENERGY TOOLS

"YC" SERIES ELEVATOR

SAFETY INSTRUCTIONS

The most important safety device for this tool is **YOU**. Your good judgment is the best protection against injury.

⚠ WARNING



To reduce the risk of injury, everyone using, installing, performing maintenance, changing accessories on, or working near this tool must read and understand these instructions before performing any such task.

Workplace Hazards

⚠WARNING: keep hands/fingers clear of the elevator bore when installing the elevator around the pipe.

⚠WARNING: Always use the proper tools and wear eye, head, hand, and foot protection when servicing this elevator.

⚠WARNING: Maintain a balanced body position and secure footing.

⚠WARNING: For professional use only.



Read Operation manual before use.



Pay attention: do not place your hands between moving parts.



DO NOT lift from this area.



Be careful when lifting from these areas.

Maintenance Hazards

⚠WARNING: Use only Keystone Energy Tool components on equipment. Failure to do so may affect the correct functioning of the tool and may cause injury or death.

⚠WARNING: KET equipment is made of cast alloy heat treated steel and should never be welded on in the field. Improper welding can cause cracks or brittleness in the castings which could result in drastic weakening or failure of the equipment. Any welding or machining must be performed by an authorized KET or API certified repair center.

⚠WARNING: Improper welding and/or re-machining of cast alloy heat treated steel can cause personnel injury, property damage, or death.



DO NOT DISCARD – GIVE TO USER **Keystone** ENERGY TOOLS

1.0 Introduction

This technical manual contains operation and maintenance instructions for Keystone “YC” series, slip-type, center latch, manual elevators with assembly drawings and complete parts breakdown. It provides a guide for proper field use, disassembling and repair.

The Keystone “YC” series elevators are designed to be used on all API collar type or integral joint tubing. They are balanced making them easy to handle and easy to latch on and take off at any point below the upset of the tubing. All “YC” series elevators incorporate a four slip interlocking gripping mechanism assuring a uniform grip with minimum marking to the tubular. All Keystone elevators are made up of high alloy, heat treated, steel construction, and designed to meet or exceed API specifications.

The “YC” series elevators include safety features such as guarded operating handles to help prevent accidents to operators and an extra handle at the rear of the elevator for easier, safer operation. All type “YC” elevators incorporate a latch and safety latch lock combination. The size range of the “YC” series elevator is as illustrated in the table provided. (See Figure 1)

NOTE: The maximum allowable load capacity of an elevator and slip assembly is governed solely by the **elevator body rating**. The slip functions as a load-transfer component and does not define the load capacity of the elevator it is used in.

Model	Tons	Range
YC	75	3 ½" - 7"

Figure 1

NOTE: WARNING labels have been installed at critical areas on the tool. Familiarize yourself with their message and locations before proceeding to operate equipment.

See Safety Instructions Page 4

⚠WARNING: During use, the elevator should never be run into the tool joints or couplings inducing any type of shock load into the equipment. Shock loads are an impact-type force applied over a short instant of time. In shock loading, the energy of the applied force is ultimately absorbed, or transferred, to the elevator designed to resist the force. The application of shock loads to an elevator can cause shock/fatigue stress loading potentially resulting in premature stress/fatigue failure.

CE Marking



The tool complies with the Machinery Directive 98/37/EC and 2006/42/EC


This operating manual is a part of the technical documentation for the product.

The EC Declaration of Conformity is delivered together with the product. Keep these instructions and the associated documents for later use.

2.0 Installation

As with any manual operated elevator, the “HYC” series elevator is easily installed on the links. Before installing ensure that the correct size of elevator, slip assembly, setting ring, and inserts are installed for the tubular being run. After using a tugger line or cat line to lift the elevator onto the rig floor and position it next to the rotary table, perform the following procedure:

- ▶ Remove cotter pins and nuts from the bottom link block bolts and then remove the bolts from the elevator.
- ▶ Lift the bottom of the link blocks and hook the small end of the links through the link blocks and link arms.
- ▶ Lower the link blocks and re-install the link block bolts, nuts and cotter pins.

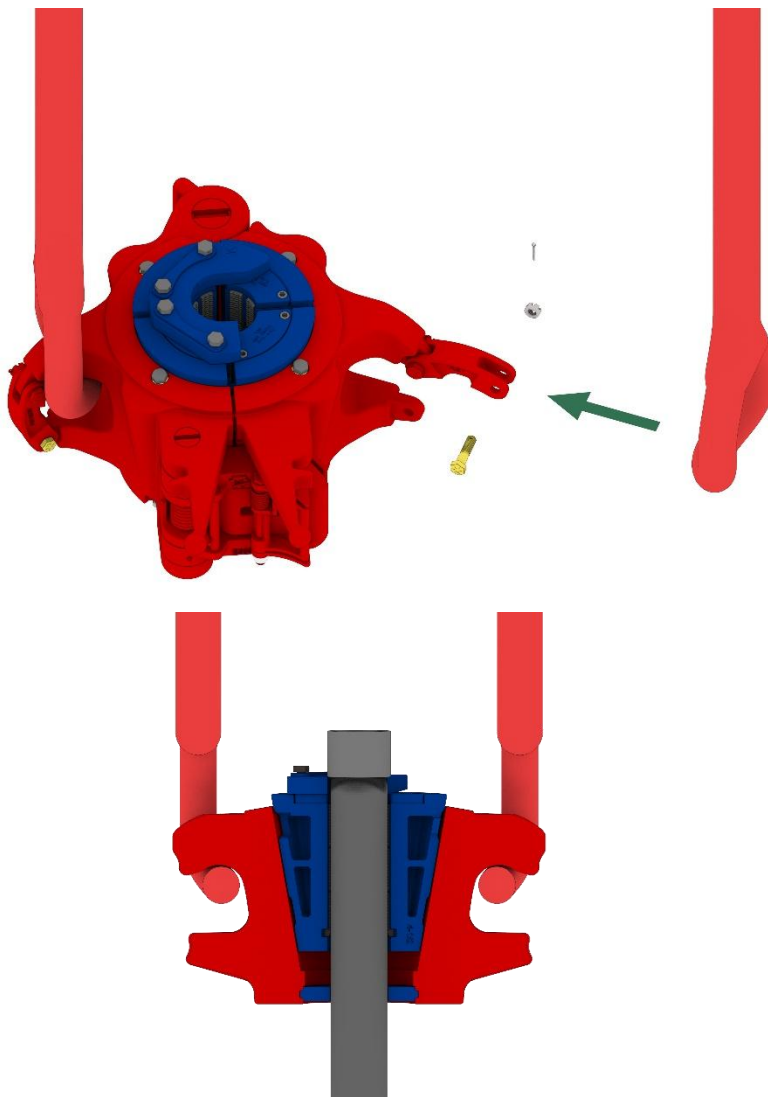

3.0 Operation

Operation of the elevator is straight forward. The door is opened by gripping the latch lock and pulling outward. This automatically releases the latch and latch lock assembly so the elevator can be positioned on the pipe. When the elevator is properly closed around the pipe, the latch locks automatically (see caution). The slips set when the elevator is raised and the setting ring makes contact with the tool joint or collar which pushed the slips down in the elevator bore. To open the elevator, ensure that there is no load on the elevator and that the slips are not under any load, then simply pull the latch lock handle out and swing the elevator halves apart. When making or breaking connections always insure that the slips are released (in the raised position). Once the connection is finished then the load can be re-applied.

NEVER ROTATE PIPE WITH THE SLIPS SET

- ▶ “YC” series elevators should only be used with the proper size setting ring and inserts for the tubular they are being used on.
- ▶ Elevators are manufactured to operate at rated capacity in a vertical direction. When used to pick up or lay down a single joint of pipe in a non-vertical position, the operator must ensure that the latch, safety latch & latch springs are in good working order and that the elevator is fully latched. Prior to hoisting with the elevator from any position, it is necessary to ensure that the elevator is completely installed around the pipe and that the latches are properly engaged. Failure to do this could result in serious injury.
- ▶ Be sure to use the handles provided for operating the elevator. Keep hands and fingers clear of the elevator bore when installing the elevator on the tool joint.
- ▶ Make sure all slip segments are free and in the up position when latching the elevator. If any of the segments are stuck in the down position, the elevator will not close properly.
- ▶ Oversized pipe could cause difficulties in latching or possibly result in the elevator latching partially or not at all. Undersized pipe will cause the slips to not set properly and possibly allow the tool joint to slip through the elevator.
- ▶ Always inspect the inserts and setting ring for proper size and wear, a wrong size or worn setting ring or inserts could allow the pipe to become wedged or fall through the elevator.
- ▶ Inspect the bore, latch, latch pin and hinge pin regularly for wear.
- ▶ Make sure link block bolts are retained with nuts and cotter pins.

4.0 Maintenance & Inspection

PRACTICE SAFETY AT ALL TIMES WHEN SERVICING THE EQUIPMENT AND USE APPROVED SAFETY METHODS, MATERIAL AND TOOLS. ALWAYS WEAR PROTECTIVE GEAR FOR EYES, HEAD, AND HANDS.

TO INSURE OPTIMUM PERFORMANCE FROM THE “Y” SERIES ELEVATORS, THE FOLLOWING CHECKS SHOULD BE PERFORMED BY A PERSON KNOWLEDGEABLE OF THE EQUIPMENT AND ITS FUNCTION, A MINIMUM OF:

DAILY:

- ▶ Visually inspect for cracks, loose fits or connections, elongation of parts, and other signs of wear, corrosion or overloading.
- ▶ Loose or missing components, deterioration, proper lubrication, and adjustment.
- ▶ Check for worn hinge pin, latch pin, and latch lock pin. These may inhibit proper closing of the door and latch lock engagement.
- ▶ Check slip springs, rubber bushings, inserts for wear.
- ▶ Check slip setting ring for wear and damage in the setting area.
- ▶ Check for proper operation of latch stop mechanism. The latch should not stop against door when closed but have no more than $\frac{1}{4}$ " of standoff from the door.
- ▶ Check springs for damage or lack of tension.
- ▶ Check link block bolts for nuts and cotter pins.

***Note: After every job, a full NDT inspection of the setting plate should be completed. If any indications are found the setting plate is no longer acceptable for continued use.**

EVERY 6 MONTHS:

- ▶ This inspection should include everything that is done in the daily inspection plus.
- ▶ A full NDT inspection of all primary-load carrying components as defined by the manufacturer.
- ▶ Inspect for excessive wear, cracks, flaws and deformations.

To perform the 6 month inspection all foreign material such as dirt, paint, grease, oil, scale, etc. shall be removed from the elevator by a suitable method of either, grit blasting, or paint stripping and steam cleaning.

FREQUENCY OF INSPECTIONS:

The owner/user of the equipment should develop schedules of inspection based upon experience, the manufactures recommendations, and one or more of the following factors.

- | | |
|---------------------------|-----------------|
| ▶ Environment | ▶ Testing |
| ▶ Load cycles | ▶ Repairs |
| ▶ Regulatory requirements | ▶ Remanufacture |
| ▶ Operating time | |

4.0 Maintenance & Inspection

Lubricate the elevator regularly during usage and when in storage to prevent corrosion. Use an extreme pressure, multi-purpose, lithium base grease of no. 1 or no. 2 consistency and multi-weight motor oil. When the elevator is in use, lubricate according to the following schedule.

*****When greasing of pins make sure the pump grease until it comes out of both ends.*****


DAILY:

- ▶ Grease hinge pin
- ▶ Lubricate latch pin and latch lock pin
- ▶ Grease underside of the lifting eyes
- ▶ Check link block bolts for nuts and cotter pins

WEEKLY:

- ▶ Brush Grease on springs
- ▶ Grease link retainer fasteners
- ▶ Check link block bolts for nuts and cotter pins
- ▶ Grease Bore
- ▶ Grease the backs of the slips

Maintenance Locations

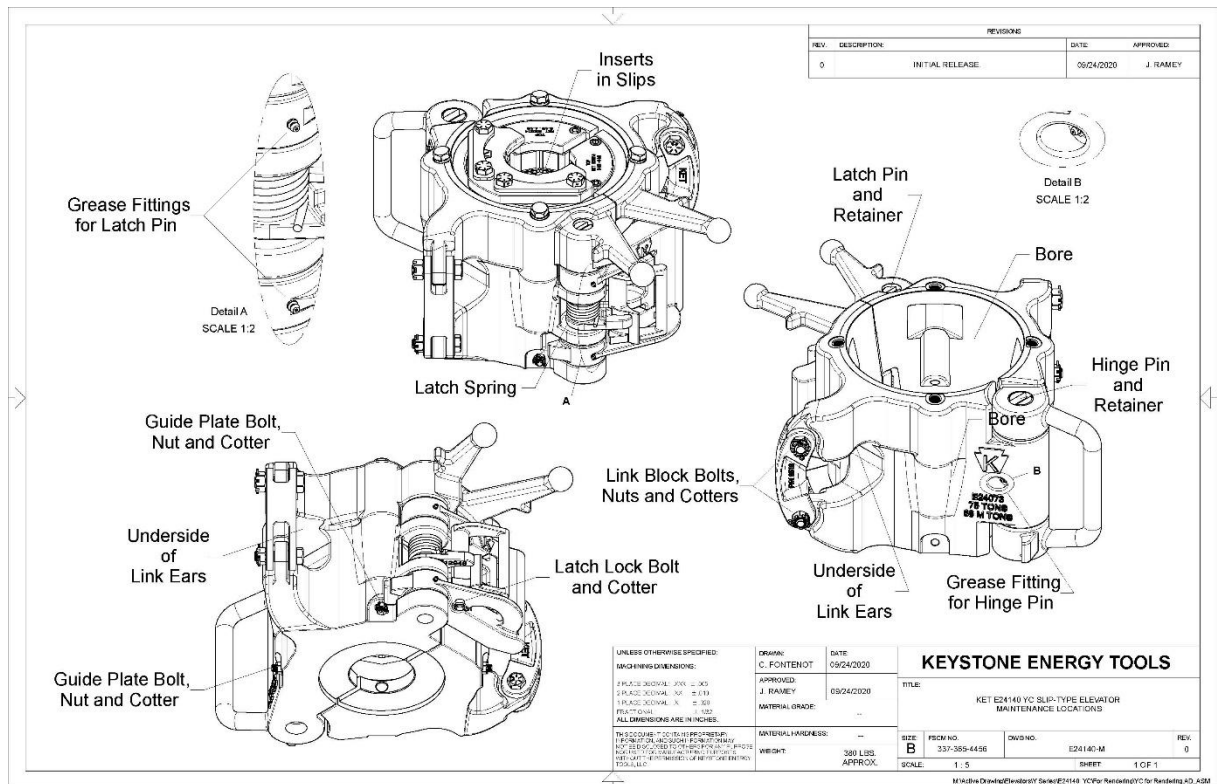

Keystone ENERGY TOOLS

5.0 Repair & Critical Areas

All "YC" series elevators are designed and manufactured similarly. Both elevators incorporate lock bars to retain the hinge & latch pins.

INSERT REPLACEMENT

Always wear eye protection when removing or replacing inserts to protect against chip fragments.

TO REMOVE WORN INSERTS OR CHANGE SIZES:

- ▶ Remove guide plate, slip setting ring, bushings, and insert retainer plates.
- ▶ Using a brass punch and hammer, drive out the inserts from the bottom of the slip.
- ▶ Clean and grease the insert slots before installing new inserts.

Important: Install the correct size inserts for the tubular used and make sure the teeth are pointing in the up position.

SLIP INSERTION AND REMOVAL:

- ▶ Open the elevator fully and clean the slip taper and spring pockets.
- ▶ Clean the slips if necessary and grease the taper portion of the slip body.
- ▶ Insert the slip springs into the spring pocket leaving the inner edge of the spring exposed.
- ▶ Starting on the left side of the elevator and proceeding counter clockwise, insert assembled slip bodies into the elevator one at a time. Compress the edge of the slip spring with the bottom of the top lug on the slip back and ease it into the upper spring pocket.
- ▶ Then insert the slip retaining pin or bolt through the top of the elevator, slip body lug and into the slip spring. Do not insert the pin or bolt completely through the spring until both pins retain their respective slip body and slip spring.

- ▶ Once both slip pins or bolts are in place then screw retaining bolts into place.
- ▶ Make sure the proper size of inserts are loaded into the slip segments, followed by the insert spacers, and then place an insert retainer plate into each slip. **(See figure 2)**
- ▶ Place the slip setting ring over the slips on the left hand side of the elevator. Attach the setting ring to the slip segments with rubber bushings, lock-washers and setting plate bolts. (Note: the setting ring must be placed on the left side of the elevator to avoid obstructing the tubing entering the elevator).
- ▶ Secure the insert retainer plates with the insert retainer screws on the right side of the elevator.
- ▶ Tighten all insert retainer screws. Check for free movement of the setting plate. This movement is required for proper operation with the corresponding insert retainer plate as provided by the bushing. (Important: all setting plate bolts and insert retainer screws retaining the slip setting ring and insert retainers must be secured with safety wire to keep them from backing out. Stainless Steel 3/32" safety wire is recommended. **(See figure 3)**

Important: Never exceed 20 ft. lbs. on setting plate bolt torque. Failure to do so can result in injury or death.

TO PREVENT JAMMING, CHECK EACH PAIR OF SLIP BODIES FOR THE FOLLOWING:

- ▶ Free movement of slip body on guide pin.
- ▶ No interface of slip guide lug in spring recess slots.
- ▶ A gap between the slips when they are set and fully compressed.

For slip removal, the top guide plate, slip setting ring, and slip retaining bolt must be removed from the elevator.

5.0 Repair & Critical Areas

“YC” SERIES DISASSEMBLE PROCEDURE

- ▶ “YC” series latch pins are retained by dowel pins that must be removed before driving out latch pin. Drive out latch pin from bottom of elevator.
- ▶ To remove the latch lock pin, remove dowel pins and drive out latch lock pin. Remove cotter key and drive out the latch lock pin.
- ▶ Remove the hinge pin by driving it out from the bottom of the elevator, shearing the lock bar in the process and remove the latch pin in the same manner. As an alternative method, the lock bar can be drilled in the center, then split by using a chisel and removed. In either case the lock bar must be discarded.
- ▶ To remove the link block, remove cotter keys from the link block bolts and unscrew link lock bolts.
- ▶ If the door lug pin is damaged, drive or press it out from the bottom of the lug.
- ▶ Inspect all parts for damage, wear, and cracks and replace as required. It is recommended that the springs be replaced at this time.
- ▶ Reassembling is the reverse of disassembling.
- ▶ Install new lock bars and or dowel pins on hinge & latch pins.
- ▶ After assembly, ensure that full spring tension is available to close the latch & latch lock. The latch spring should contact the latch cam and or latch stop which in turn transmits the spring force to the latch.
- ▶ Check the latch for proper engagement with the door lug pin by holding the body and door apart (such that the latch contacts the lug on the door) and attempt to pry the latch open. After minimal travel of the latch the hook on the latch lock should engage with the door lug pin stopping the travel of the latch.
- ▶ Check link block bolts, nuts, & cotter pins

KEYSTONE ENERGY TOOLS, FACTORY TOOL REPAIR.

Worn or damaged elevators are returned to like new condition with factory repair procedures based upon API 8B Specification. When tools are received for repair, they are disassembled, dimensionally checked and undergo a magnetic particle inspection. Worn areas are repaired by welding or replacing with new parts, and then heat-treated to original hardness specifications. They are proof load tested and undergo another magnetic particle inspection 24 hours after load test. They are then reassembled, functionally tested and re-certified.

CAUTION:

- ▶ Do not use any elevator if the latch and latch lock do not function properly.
- ▶ Use only parts manufactured and sold by Keystone Energy Tools or one of KET's authorized distributors.
- ▶ Re-machining and re-heat treating should be performed only by KET or at a KET approved repair facility. Improper machining could result in increased stress or improper alignment of the component parts. Either condition could be hazardous to personnel and equipment.
- ▶ Due to the complex metallurgy used in KET elevators, welding should be done only at KET or a KET approved repair facility.
- ▶ Bodies, doors, and latches are specifically matched by KET professionals. For this reason, a body, door and or latch from one elevator should never be exchanged with parts from another elevator.
- ▶ Always wear eye protection and the proper clothing when grinding, striking, or handling parts.
- ▶ Make sure link block bolts have nuts and cotter pins.
- ▶ If the load rating of the elevator is ever exceeded for any reason the elevator should immediately be removed from service and returned to the manufacturer for evaluation.

5.0 Repair & Critical Areas

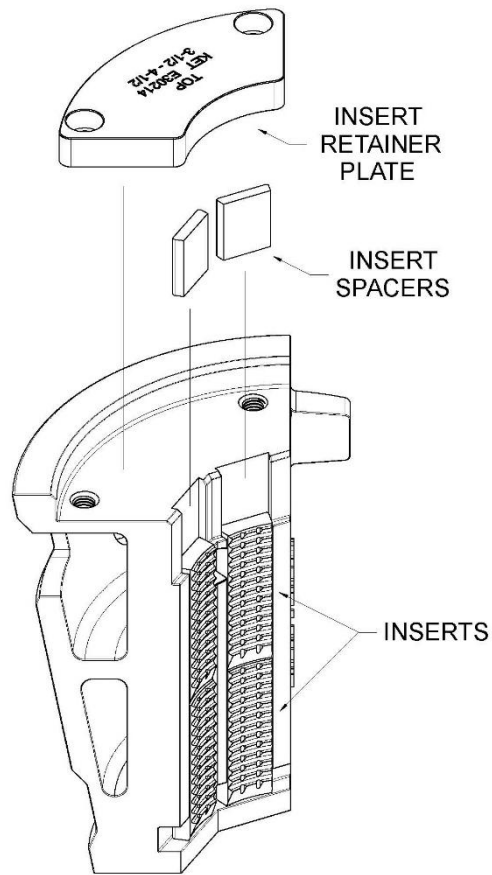


Figure 2


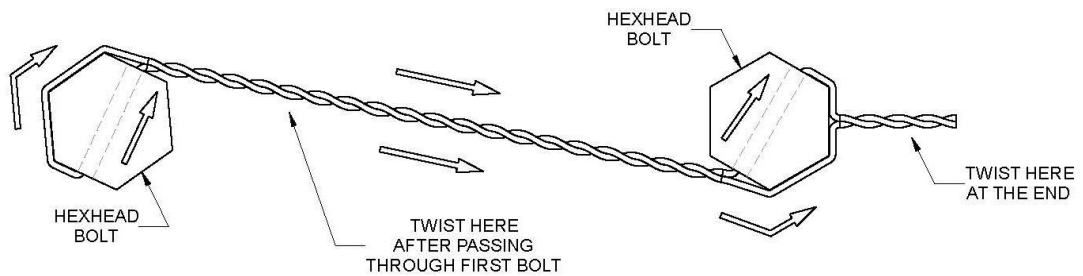


Figure 3


5.0 Repair Critical Areas

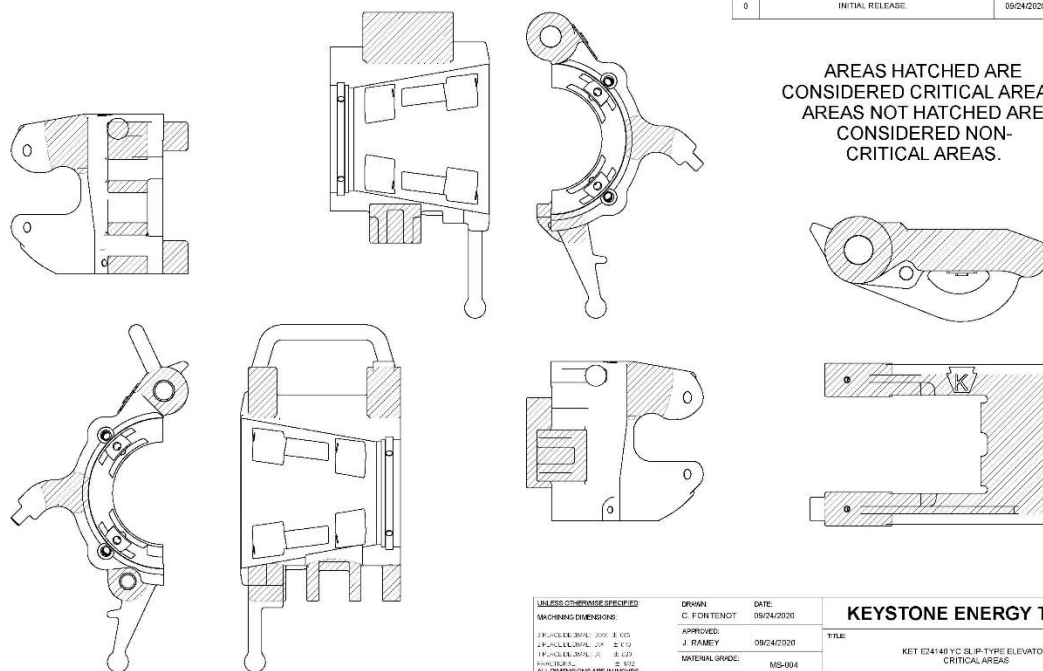

AREAS HATCHED ARE
CONSIDERED CRITICAL AREAS.
AREAS NOT HATCHED ARE
CONSIDERED NON-
CRITICAL AREAS.

REVISIONS			
REV.	DESCRIPTION:	DATE:	APPROVED:
0	INITIAL RELEASE.	09/24/2020	J. RAMEY

UNCLASSIFIED//FOR OFFICIAL USE ONLY		DRAWN: DATE: C. F. FONTENOT 09/24/2020		KEYSTONE ENERGY TOOLS		
WORKING DIMENSIONS: 1. FACE/END VIEW: 200 X 400 2. SIDE/END VIEW: 200 X 400 3. FRONT VIEW: 200 X 400 4. DETAIL VIEW: 200 X 400		APPROVED: DATE: J. RAMEY 09/24/2020				TITLE: KET 124140 SLIP-IP TYPE ELEVATOR CRITICAL AREAS
MATERIAL SPEC.: MS-004 ALLOY/TEMPERATURE: 6061-T6						
MATERIAL/PROCESS: 6061-T6 FINISH: 6061-T6						
WEIGHT: 1.20 LBS DIMENSIONS: 200 X 400 X 400						
PART NUMBER: 124140						
MATERIAL/PROCESS: 6061-T6 FINISH: 6061-T6 WEIGHT: 1.20 LBS DIMENSIONS: 200 X 400 X 400		PART NUMBER: 124140		REV: 1.0		

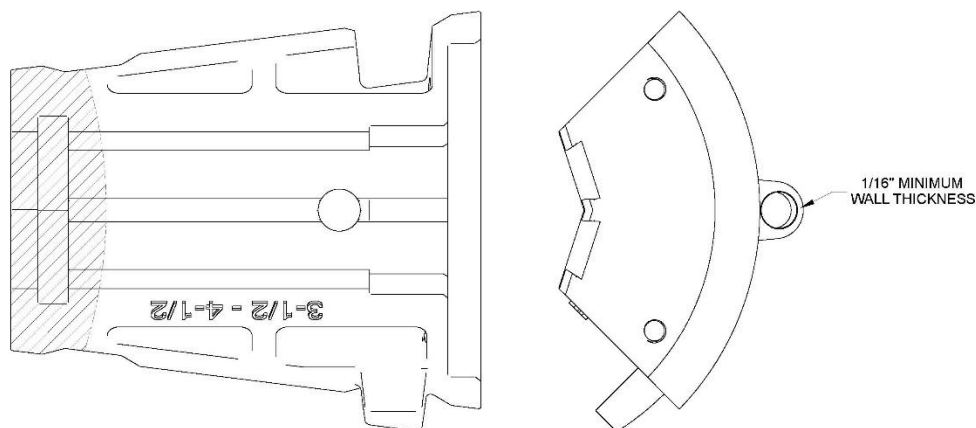

AREAS HATCHED ARE
CONSIDERED CRITICAL AREAS.
AREAS NOT HATCHED ARE
CONSIDERED NON-
CRITICAL AREAS.


REVISIONS			
REV.	DESCRIPTION:	DATE:	APPROVED:
0	INITIAL RELEASE.	09/24/2020	J. RAMEY

UNLESS OTHERWISE SPECIFIED		DWG. NO. 03-10-0000 DATE 09/24/2020	KEYSTONE ENERGY TDS	
MACHINING DIMENSIONS		APPROVED: J. RAMEY 09/24/2020	TITLE:	
1/8" (3.175) DIA. ± 0.005 1/4" (6.35) DIA. ± 0.005 3/8" (9.52) DIA. ± 0.005 1/2" (12.7) DIA. ± 0.005 5/8" (15.875) DIA. ± 0.005 3/4" (19.05) DIA. ± 0.005 1" (25.4) DIA. ± 0.005 1 1/4" (31.75) DIA. ± 0.005 1 1/2" (38.1) DIA. ± 0.005 2" (50.8) DIA. ± 0.005 2 1/2" (63.5) DIA. ± 0.005 3" (76.2) DIA. ± 0.005 3 1/2" (88.9) DIA. ± 0.005 4" (101.6) DIA. ± 0.005 4 1/2" (114.3) DIA. ± 0.005 5" (127) DIA. ± 0.005 5 1/2" (139.7) DIA. ± 0.005 6" (152.4) DIA. ± 0.005 6 1/2" (165.1) DIA. ± 0.005 7" (177.8) DIA. ± 0.005 7 1/2" (190.5) DIA. ± 0.005 8" (203.2) DIA. ± 0.005 8 1/2" (215.9) DIA. ± 0.005 9" (228.6) DIA. ± 0.005 9 1/2" (241.3) DIA. ± 0.005 10" (254) DIA. ± 0.005 10 1/2" (266.7) DIA. ± 0.005 11" (279.4) DIA. ± 0.005 11 1/2" (292.1) DIA. ± 0.005 12" (304.8) DIA. ± 0.005 12 1/2" (317.5) DIA. ± 0.005 13" (330.2) DIA. ± 0.005 13 1/2" (342.9) DIA. ± 0.005 14" (355.6) DIA. ± 0.005 14 1/2" (368.3) DIA. ± 0.005 15" (381) DIA. ± 0.005 15 1/2" (393.7) DIA. ± 0.005 16" (406.4) DIA. ± 0.005 16 1/2" (419.1) DIA. ± 0.005 17" (431.8) DIA. ± 0.005 17 1/2" (444.5) DIA. ± 0.005 18" (457.2) DIA. ± 0.005 18 1/2" (469.9) DIA. ± 0.005 19" (482.6) DIA. ± 0.005 19 1/2" (495.3) DIA. ± 0.005 20" (508) DIA. ± 0.005 20 1/2" (520.7) DIA. ± 0.005 21" (533.4) DIA. ± 0.005 21 1/2" (546.1) DIA. ± 0.005 22" (558.8) DIA. ± 0.005 22 1/2" (571.5) DIA. ± 0.005 23" (584.2) DIA. ± 0.005 23 1/2" (596.9) DIA. ± 0.005 24" (609.6) DIA. ± 0.005 24 1/2" (622.3) DIA. ± 0.005 25" (635) DIA. ± 0.005 25 1/2" (647.7) DIA. ± 0.005 26" (660.4) DIA. ± 0.005 26 1/2" (673.1) DIA. ± 0.005 27" (685.8) DIA. ± 0.005 27 1/2" (698.5) DIA. ± 0.005 28" (711.2) DIA. ± 0.005 28 1/2" (723.9) DIA. ± 0.005 29" (736.6) DIA. ± 0.005 29 1/2" (749.3) DIA. ± 0.005 30" (762) DIA. ± 0.005 30 1/2" (774.7) DIA. ± 0.005 31" (787.4) DIA. ± 0.005 31 1/2" (800.1) DIA. ± 0.005 32" (812.8) DIA. ± 0.005 32 1/2" (825.5) DIA. ± 0.005 33" (838.2) DIA. ± 0.005 33 1/2" (850.9) DIA. ± 0.005 34" (863.6) DIA. ± 0.005 34 1/2" (876.3) DIA. ± 0.005 35" (889) DIA. ± 0.005 35 1/2" (901.7) DIA. ± 0.005 36" (914.4) DIA. ± 0.005 36 1/2" (927.1) DIA. ± 0.005 37" (939.8) DIA. ± 0.005 37 1/2" (952.5) DIA. ± 0.005 38" (965.2) DIA. ± 0.005 38 1/2" (977.9) DIA. ± 0.005 39" (990.6) DIA. ± 0.005 39 1/2" (1003.3) DIA. ± 0.005 40" (1016) DIA. ± 0.005 40 1/2" (1028.7) DIA. ± 0.005 41" (1041.4) DIA. ± 0.005 41 1/2" (1054.1) DIA. ± 0.005 42" (1066.8) DIA. ± 0.005 42 1/2" (1079.5) DIA. ± 0.005 43" (1092.2) DIA. ± 0.005 43 1/2" (1104.9) DIA. ± 0.005 44" (1117.6) DIA. ± 0.005 44 1/2" (1130.3) DIA. ± 0.005 45" (1143) DIA. ± 0.005 45 1/2" (1155.7) DIA. ± 0.005 46" (1168.4) DIA. ± 0.005 46 1/2" (1181.1) DIA. ± 0.005 47" (1193.8) DIA. ± 0.005 47 1/2" (1206.5) DIA. ± 0.005 48" (1219.2) DIA. ± 0.005 48 1/2" (1231.9) DIA. ± 0.005 49" (1244.6) DIA. ± 0.005 49 1/2" (1257.3) DIA. ± 0.005 50" (1270) DIA. ± 0.005 50 1/2" (1282.7) DIA. ± 0.005 51" (1295.4) DIA. ± 0.005 51 1/2" (1308.1) DIA. ± 0.005 52" (1320.8) DIA. ± 0.005 52 1/2" (1333.5) DIA. ± 0.005 53" (1346.2) DIA. ± 0.005 53 1/2" (1358.9) DIA. ± 0.005 54" (1371.6) DIA. ± 0.005 54 1/2" (1384.3) DIA. ± 0.005 55" (1397) DIA. ± 0.005 55 1/2" (1409.7) DIA. ± 0.005 56" (1422.4) DIA. ± 0.005 56 1/2" (1435.1) DIA. ± 0.005 57" (1447.8) DIA. ± 0.005 57 1/2" (1460.5) DIA. ± 0.005 58" (1473.2) DIA. ± 0.005 58 1/2" (1485.9) DIA. ± 0.005 59" (1498.6) DIA. ± 0.005 59 1/2" (1511.3) DIA. ± 0.005 60" (1524) DIA. ± 0.005 60 1/2" (1536.7) DIA. ± 0.005 61" (1549.4) DIA. ± 0.005 61 1/2" (1562.1) DIA. ± 0.005 62" (1574.8) DIA. ± 0.005 62 1/2" (1587.5) DIA. ± 0.005 63" (1600.2) DIA. ± 0.005 63 1/2" (1612.9) DIA. ± 0.005 64" (1625.6) DIA. ± 0.005 64 1/2" (1638.3) DIA. ± 0.005 65" (1651) DIA. ± 0.005 65 1/2" (1663.7) DIA. ± 0.005 66" (1676.4) DIA. ± 0.005 66 1/2" (1689.1) DIA. ± 0.005 67" (1701.8) DIA. ± 0.005 67 1/2" (1714.5) DIA. ± 0.005 68" (1727.2) DIA. ± 0.005 68 1/2" (1739.9) DIA. ± 0.005 69" (1752.6) DIA. ± 0.005 69 1/2" (1765.3) DIA. ± 0.005 70" (1778) DIA. ± 0.005 70 1/2" (1790.7) DIA. ± 0.005 71" (1803.4) DIA. ± 0.005 71 1/2" (1816.1) DIA. ± 0.005 72" (1828.8) DIA. ± 0.005 72 1/2" (1841.5) DIA. ± 0.005 73" (1854.2) DIA. ± 0.005 73 1/2" (1866.9) DIA. ± 0.005 74" (1879.6) DIA. ± 0.005 74 1/2" (1892.3) DIA. ± 0.005 75" (1905) DIA. ± 0.005 75 1/2" (1917.7) DIA. ± 0.005 76" (1930.4) DIA. ± 0.005 76 1/2" (1943.1) DIA. ± 0.005 77" (1955.8) DIA. ± 0.005 77 1/2" (1968.5) DIA. ± 0.005 78" (1981.2) DIA. ± 0.005 78 1/2" (1993.9) DIA. ± 0.005 79" (2006.6) DIA. ± 0.005 79 1/2" (2019.3) DIA. ± 0.005 80" (2032) DIA. ± 0.005 80 1/2" (2044.7) DIA. ± 0.005 81" (2057.4) DIA. ± 0.005 81 1/2" (2070.1) DIA. ± 0.005 82" (2082.8) DIA. ± 0.005 82 1/2" (2095.5) DIA. ± 0.005 83" (2108.2) DIA. ± 0.005 83 1/2" (2120.9) DIA. ± 0.005 84" (2133.6) DIA. ± 0.005 84 1/2" (2146.3) DIA. ± 0.005 85" (2159) DIA. ± 0.005 85 1/2" (2171.7) DIA. ± 0.005 86" (2184.4) DIA. ± 0.005 86 1/2" (2197.1) DIA. ± 0.005 87" (2209.8) DIA. ± 0.005 87 1/2" (2222.5) DIA. ± 0.005 88" (2235.2) DIA. ± 0.005 88 1/2" (2247.9) DIA. ± 0.005 89" (2260.6) DIA. ± 0.005 89 1/2" (2273.3) DIA. ± 0.005 90" (2286) DIA. ± 0.005 90 1/2" (2298.7) DIA. ± 0.005 91" (2311.4) DIA. ± 0.005 91 1/2" (2324.1) DIA. ± 0.005 92" (2336.8) DIA. ± 0.005 92 1/2" (2349.5) DIA. ± 0.005 93" (2362.2) DIA. ± 0.005 93 1/2" (2374.9) DIA. ± 0.005 94" (2387.6) DIA. ± 0.005 94 1/2" (2400.3) DIA. ± 0.005 95" (2413) DIA. ± 0.005 95 1/2" (2425.7) DIA. ± 0.005 96" (2438.4) DIA. ± 0.005 96 1/2" (2451.1) DIA. ± 0.005 97" (2463.8) DIA. ± 0.005 97 1/2" (2476.5) DIA. ± 0.005 98" (2489.2) DIA. ± 0.005 98 1/2" (2501.9) DIA. ± 0.005 99" (2514.6) DIA. ± 0.005 99 1/2" (2527.3) DIA. ± 0.005 100" (2540) DIA. ± 0.005 100 1/2" (2552.7) DIA. ± 0.005 101" (2565.4) DIA. ± 0.005 101 1/2" (2578.1) DIA. ± 0.005 102" (2590.8) DIA. ± 0.005 102 1/2" (2603.5) DIA. ± 0.005 103" (2616.2) DIA. ± 0.005 103 1/2" (2628.9) DIA. ± 0.005 104" (2641.6) DIA. ± 0.005 104 1/2" (2654.3) DIA. ± 0.005 105" (2667) DIA. ± 0.005 105 1/2" (2679.7) DIA. ± 0.005 106" (2692.4) DIA. ± 0.005 106 1/2" (2705.1) DIA. ± 0.005 107" (2717.8) DIA. ± 0.005 107 1/2" (2730.5) DIA. ± 0.005 108" (2743.2) DIA. ± 0.005 108 1/2" (2755.9) DIA. ± 0.005 109" (2768.6) DIA. ± 0.005 109 1/2" (2781.3) DIA. ± 0.005 110" (2794) DIA. ± 0.005 110 1/2" (2806.7) DIA. ± 0.005 111" (2819.4) DIA. ± 0.005 111 1/2" (2832.1) DIA. ± 0.005 112" (2844.8) DIA. ± 0.005 112 1/2" (2857.5) DIA. ± 0.005 113" (2870.2) DIA. ± 0.005 113 1/2" (2882.9) DIA. ± 0.005 114" (2895.6) DIA. ± 0.005 114 1/2" (2908.3) DIA. ± 0.005 115" (2921) DIA. ± 0.005 115 1/2" (2933.7) DIA. ± 0.005 116" (2946.4) DIA. ± 0.005 116 1/2" (2959.1) DIA. ± 0.005 117" (2971.8) DIA. ± 0.005 117 1/2" (2984.5) DIA. ± 0.005 118" (2997.2) DIA. ± 0.005 118 1/2" (3009.9) DIA. ± 0.005 119" (3022.6) DIA. ± 0.005 119 1/2" (3035.3) DIA. ± 0.005 120" (3048) DIA. ± 0.005 120 1/2" (3060.7) DIA. ± 0.005 121" (3073.4) DIA. ± 0.005 121 1/2" (3086.1) DIA. ± 0.005 122" (3098.8) DIA. ± 0.005 122 1/2" (3111.5) DIA. ± 0.005 123" (3124.2) DIA. ± 0.005 123 1/2" (3136.9) DIA. ± 0.005 124" (3149.6) DIA. ± 0.005 124 1/2" (3162.3) DIA. ± 0.005 125" (3175) DIA. ± 0.005 125 1/2" (3187.7) DIA. ± 0.005 126" (3200.4) DIA. ± 0.005 126 1/2" (3213.1) DIA. ± 0.005 127" (3225.8) DIA. ± 0.005 127 1/2" (3238.5) DIA. ± 0.005 128" (3251.2) DIA. ± 0.005 128 1/2" (3263.9) DIA. ± 0.005 129" (3276.6) DIA. ± 0.005 129 1/2" (3289.3) DIA. ± 0.005 130" (3302) DIA. ± 0.005 130 1/2" (3314.7) DIA. ± 0.005 131" (3327.4) DIA. ± 0.005 131 1/2" (3340.1) DIA. ± 0.005 132" (3352.8) DIA. ± 0.005 132 1/2" (3365.5) DIA. ± 0.005 133" (3378.2) DIA. ± 0.005 133 1/2" (3390.9) DIA. ± 0.005 134" (3403.6) DIA. ± 0.005 134 1/2" (3416.3) DIA. ± 0.005 135" (3429) DIA. ± 0.005 135 1/2" (3441.7) DIA. ± 0.005 136" (3454.4) DIA. ± 0.005 136 1/2" (3467.1) DIA. ± 0.005 137" (3479.8) DIA. ± 0.005 137 1/2" (3492.5) DIA. ± 0.005 138" (3505.2) DIA. ± 0.005 138 1/2" (3517.9) DIA. ± 0.005 139" (3530.6) DIA. ± 0.005 139 1/2" (3543.3) DIA. ± 0.005 140" (3556) DIA. ± 0.005 140 1/2" (3568.7) DIA. ± 0.005 141" (3581.4) DIA. ± 0.005 141 1/2" (3594.1) DIA. ± 0.005 142" (3606.8) DIA. ± 0.005 142 1/2" (3619.5) DIA. ± 0.005 143" (3632.2) DIA. ± 0.005 143 1/2" (3644.9) DIA. ± 0.005 144" (3657.6) DIA. ± 0.005 144 1/2" (3670.3) DIA. ± 0.005 145" (3683) DIA. ± 0.005 145 1/2" (3695.7) DIA. ± 0.005 146" (3708.4) DIA. ± 0.005 146 1/2" (3721.1) DIA. ± 0.005 147" (3733.8) DIA. ± 0.005 147 1/2" (3746.5) DIA. ± 0.005 148" (3759.2) DIA. ± 0.005 148 1/2" (3771.9) DIA. ± 0.005 149" (3784.6) DIA. ± 0.005 149 1/2" (3797.3) DIA. ± 0.005 150" (3810) DIA. ± 0.005 150 1/2" (3822.7) DIA. ± 0.005 151" (3835.4) DIA. ± 0.005 151 1/2" (3848.1) DIA. ± 0.005 152" (3860.8) DIA. ± 0.005 152 1/2" (3873.5) DIA. ± 0.005 153" (3886.2) DIA. ± 0.005 153 1/2" (3898.9) DIA. ± 0.005 154" (3911.6) DIA. ± 0.005 154 1/2" (3924.3) DIA. ± 0.005 155" (3937) DIA. ± 0.005 155 1/2" (3949.7) DIA. ± 0.005 156" (3962.4) DIA. ± 0.005 156 1/2" (3975.1) DIA. ± 0.005 157" (3987.8) DIA. ± 0.005 157 1/2" (4000.5) DIA. ± 0.005 158" (4013.2) DIA. ± 0.005 158 1/2" (4025.9) DIA. ± 0.005 159" (4038.6) DIA. ± 0.005 159 1/2" (4051.3) DIA. ± 0.005 160" (4064) DIA. ± 0.005 160 1/2" (4076.7) DIA. ± 0.005 161" (4089.4) DIA. ± 0.005 161 1/2" (4102.1) DIA. ± 0.005 162" (4114.8) DIA. ± 0.005 162 1/2" (4127.5) DIA. ± 0.005 163" (4140.2) DIA. ± 0.005 163 1/2" (4152.9) DIA. ± 0.005 164" (4165.6) DIA. ± 0.005 164 1/2" (4178.3) DIA. ± 0.005 165" (4191) DIA. ± 0.005 165 1/2" (4203.7) DIA. ± 0.005 166" (4216.4) DIA. ± 0.005 166 1/2" (4229.1) DIA. ± 0.005 167" (4241.8) DIA. ± 0.005 167 1/2" (4254.5) DIA. ± 0.005 168" (4267.2) DIA. ± 0.005 168 1/2" (4279.9) DIA. ± 0.005 169" (4292.6) DIA. ± 0.005 169 1/2" (4305.3) DIA. ± 0.005 170" (4318) DIA. ± 0.005 170 1/2" (4330.7) DIA. ± 0.005 171" (4343.4) DIA. ± 0.005 171 1/2" (4356.1) DIA. ± 0.005 172" (4368.8) DIA. ± 0.005 172 1/2" (4381.5) DIA. ± 0.005 173" (4394.2) DIA. ± 0.005 173 1/2" (4406.9) DIA. ± 0.005 174" (4419.6) DIA. ± 0.005 174 1/2" (4432.3) DIA. ± 0.005 175" (4445) DIA. ± 0.005 175 1/2" (4457.7) DIA. ± 0.005 176" (4470.4) DIA. ± 0.005 176 1/2" (4483.1) DIA. ± 0.005 177" (4495.8) DIA. ± 0.005 177 1/2" (4508.5) DIA. ± 0.005 178" (4521.2) DIA. ± 0.005 178 1/2" (4533.9) DIA. ± 0.005 179" (4546.6) DIA. ± 0.005 179 1/2" (4559.3) DIA. ± 0.005 180" (4572) DIA. ± 0.005 180 1/2" (4584.7) DIA. ± 0.005 181" (4597.4) DIA. ± 0.005 181 1/2" (4610.1) DIA. ± 0.005 182" (4622.8) DIA. ± 0.005 182 1/2" (4635.5) DIA. ± 0.005 183" (4648.2) DIA. ± 0.005 183 1/2" (4660.9) DIA. ± 0.005 184" (4673.6) DIA. ± 0.005 184 1/2" (4686.3) DIA. ± 0.005 185" (4699) DIA. ± 0.005 185 1/2" (4711.7) DIA. ± 0.005 186" (4724.4) DIA. ± 0.005 186 1/2" (4737.1) DIA. ± 0.005 187" (4749.8) DIA. ± 0.005 187 1/2" (4762.5) DIA. ± 0.005 188" (4775.2) DIA. ± 0.005 188 1/2" (4787.9) DIA. ± 0.005 189" (4800.6) DIA. ± 0.005 189 1/2" (4813.3) DIA. ± 0.005 190" (4826) DIA. ± 0.005 190 1/2" (4838.7) DIA. ± 0.005 191" (4851.4) DIA. ± 0.005 191 1/2" (4864.1) DIA. ± 0.005 192" (4876.8) DIA. ± 0.005 192 1/2" (4889.5) DIA. ± 0.005 193" (4902.2) DIA. ± 0.005 193 1/2" (4914.9) DIA. ± 0.005 194" (4927.6) DIA. ± 0.005 194 1/2" (4940.3) DIA. ± 0.005 195" (4953) DIA. ± 0.005 195 1/2" (4965.7) DIA. ± 0.005 196" (4978.4) DIA. ± 0.005 196 1/2" (4991.1) DIA. ± 0.005 197" (5003.8) DIA. ± 0.005 197 1/2" (5016.5) DIA. ± 0.005 198" (5029.2) DIA. ± 0.005 198 1/2" (5041.9) DIA. ± 0.005 199" (5054.6) DIA. ± 0.005 199 1/2" (5067.3) DIA. ± 0.005 200" (5080) DIA. ± 0.005 200 1/2" (5092.7) DIA. ± 0.005 201" (5105.4) DIA. ± 0.005 201 1/2" (5118.1) DIA. ± 0.005 202" (5130.8) DIA. ± 0.005 202 1/2" (5143.5) DIA. ± 0.005 203" (5156.2) DIA. ± 0.005 203 1/2" (5168.9) DIA. ± 0.005 204" (5181.6) DIA. ± 0.005 204 1/2" (5194.3) DIA. ± 0.005 205" (5207) DIA. ± 0.005 205 1/2" (5219.7) DIA. ± 0.005 206" (5232.4) DIA. ± 0.005 206 1/2" (5245.1) DIA. ± 0.005 207" (5257.8) DIA. ± 0.005 207 1/2" (5270.5) DIA. ± 0.005 208" (5283.2) DIA. ± 0.005 208 1/2" (5295.9) DIA. ± 0.005 209" (5308.6) DIA. ± 0.005 209 1/2" (5321.3) DIA. ± 0.005 210" (5334) DIA. ± 0.005 210 1/2" (5346.7) DIA. ± 0.005 211" (5359.4) DIA. ± 0.005 211 1/2" (5372.1) DIA. ± 0.005 212" (5384.8) DIA. ± 0.005 212 1/2" (5397.5) DIA. ± 0.005 213" (5410.2) DIA. ± 0.005 213 1/2" (5422.9) DIA. ± 0.005 214" (5435.6) DIA. ± 0.005 214 1/2" (5448.3) DIA. ± 0.005 215" (5461) DIA. ± 0.005 215 1/2" (5473.7) DIA. ± 0.005 216" (5486.4) DIA. ± 0.005 216 1/2" (5499.1) DIA. ± 0.005 217" (5511.8) DIA. ± 0.005 217 1/2" (5524.5) DIA. ± 0.005 218" (5537.2) DIA. ± 0.005 218 1/2" (5549.9) DIA. ± 0.005 219" (5562.6) DIA. ± 0.005 219 1/2" (5575.3) DIA. ± 0.005 220" (5588) DIA. ± 0.005 220 1/2" (5600.7) DIA. ± 0.005 221" (5613.4) DIA. ± 0.005 221 1/2" (5626.1) DIA. ± 0.005 222" (5638.8) DIA. ± 0.005 222 1/2" (5651.5) DIA. ± 0.005 223" (5664.2) DIA. ± 0.005 223 1/2" (5676.9) DIA. ± 0.005 224" (5689.6) DIA. ± 0.005 224 1/2" (5702.3) DIA. ± 0.005 225" (5715) DIA. ± 0.005 225 1/2" (5727.7) DIA. ± 0.005 226" (5740.4) DIA. ± 0.005 226 1/2" (5753.1) DIA. ± 0.005 227" (5765.8) DIA. ± 0.005 227 1/2" (5778.5) DIA. ± 0.005 228" (5791.2) DIA. ± 0.005 228 1/2" (5803.9) DIA. ± 0.005 229" (5816.6) DIA. ± 0.005 229 1/2" (5829.3) DIA. ± 0.005 230" (5842) DIA. ± 0.005 230 1/2" (5854.7) DIA. ± 0.005 231" (5867.4) DIA. ± 0.005 231 1/2" (5880.1) DIA. ± 0.005 232" (5892.8) DIA. ± 0.005 232 1/2" (5905.5) DIA. ± 0.005 233" (5918.2) DIA. ± 0.005 233 1/2" (5930.9) DIA. ± 0.005 234" (5943.6) DIA. ± 0.005 234 1/2" (5956.3) DIA. ± 0.005 235" (5969) DIA. ± 0.005 235 1/2" (5981.7) DIA. ± 0.005 236" (5994.4) DIA. ± 0.005 236 1/2" (6007.1) DIA. ± 0.005 237" (6019.8) DIA. ± 0.005 237 1/2" (6032.5) DIA. ± 0.005 238" (6045.2) DIA. ± 0.005 238 1/2" (6057.9) DIA. ± 0.005 239" (6070.6) DIA. ± 0.005 239 1/2" (6083.3) DIA. ± 0.005 240" (6096) DIA. ± 0.005 240 1/2" (6108.7) DIA. ± 0.005 241" (6121.4) DIA. ± 0.005 241 1/2" (6134.1) DIA. ± 0.005 242" (6146.8) DIA. ± 0.005 242 1/2" (6159.5) DIA. ± 0.005 243" (6172.2) DIA. ± 0.005 243 1/2" (6184.9) DIA. ± 0.005 244" (6197.6) DIA. ± 0.005 244 1/2" (6210.3) DIA. ± 0.005 245" (6223) DIA. ± 0.005 245 1/2" (6235.7) DIA. ± 0.005 246" (6248.4) DIA. ± 0.005 246 1/2" (6261.1) DIA. ± 0.005 247" (6273.8) DIA. ± 0.005 247 1/2" (6286.5) DIA. ± 0.005 248" (6299.2) DIA. ± 0.005 248 1/2" (6311.9) DIA. ± 0.005 249" (6324.6) DIA. ± 0.005 249 1/2" (6337.3) DIA. ± 0.005 250" (6350) DIA. ± 0.005 250 1/2" (6362.7) DIA. ± 0.005 25				


881 Arthur Davidson Elementary IV, Box 102165, W'War, San Antonio, TX 78210. Send payment for \$2000.00.

6.0 Technical Drawings

*NOTE – PAINT CAN NOT EXCEED A THICKNESS OF 0.2mm

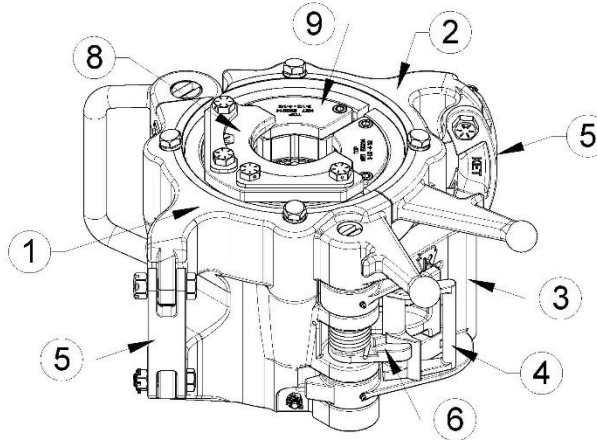

1. ELEVATOR BODY
2. ELEVATOR DOOR
3. LATCH
4. LATCH LOCK
5. LINK BLOCK
6. LATCH CAM
7. BOTTOM GUIDE PLATE (x2)
8. SETTING RING
9. SLIP ASSEMBLY (x4)

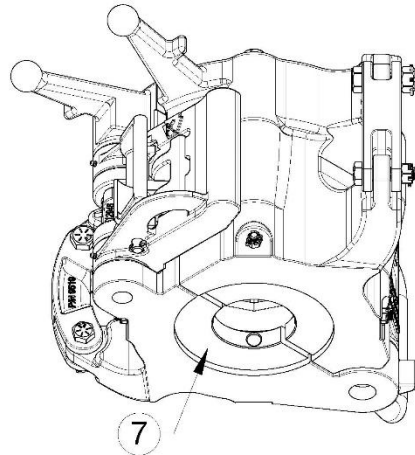

UNLESS OTHERWISE SPECIFIED:

MACHINING DIMENSIONS:

3/16" MIN. DRILL DIA. 1/8" 1/16"

2-HOLE DIA. 1/8" 1/16"

1-HOLE DIA. 1/8" 1/16"

ALL DIMENSIONS ARE IN INCHES

THIS COMPANY CONTAINS PROPRIETARY INFORMATION AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

DRAWN: C. FONTENOT

DATE: 09/24/2020

APPROVED: J. RAMEY

DATE: 09/24/2020

MATERIAL GRADE: --

MATERIAL HARDNESS: --

WEIGHT: 360 LBS APPROX.

KEYSTONE ENERGY TOOLS

TITLE:

KET E24140 YC SLIP-TYPE ELEVATOR

MAIN COMPONENTS

SIZE: B

FORMNO: 337-305-4450

DWGNO: E24140-A



REV: 0

SCALE: 1:4

SHEET: 1 OF 1

Machine Drawing/Elevator/ET Series/E24140 YC For Rendering/ETC for Rendering AD_2SM

REV.	DESCRIPTION	DATE	APPROVED
0	INITIAL RELEASE	09/24/2020	J. RAMEY

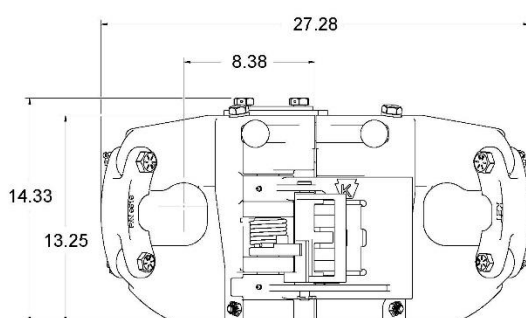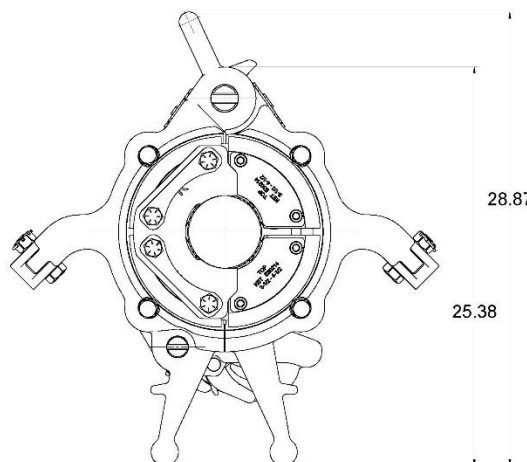

UNLESS OTHERWISE SPECIFIED:

MACHINING DIMENSIONS:

3/16" MIN. DRILL DIA. 1/8" 1/16"

2-HOLE DIA. 1/8" 1/16"

1-HOLE DIA. 1/8" 1/16"

ALL DIMENSIONS ARE IN INCHES

THIS COMPANY CONTAINS PROPRIETARY INFORMATION AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

DRAWN: C. FONTENOT

DATE: 09/24/2020

APPROVED: J. RAMEY

DATE: 09/24/2020

MATERIAL GRADE: --

MATERIAL HARDNESS: --

WEIGHT: 360 LBS APPROX.

KEYSTONE ENERGY TOOLS

TITLE:

KET E24140 YC SLIP-TYPE ELEVATOR

APPROXIMATE SIZE DIMENSIONS

SIZE: B

FORMNO: 337-305-4450

DWGNO: E24140-D

REV: 0

SCALE: 1:4.5


SHEET: 1 OF 1

Machine Drawing/Elevator/ET Series/E24140 YC For Rendering/ETC for Rendering AD_2SM


Keystone ENERGY TOOLS

6.0 Technical Drawings

1. SLIP SEGMENT
2. INSERT RETAINER
3. SPACER (x2)
4. INSERT (x4)
5. SPACER (x3)
6. INSERT (x6)

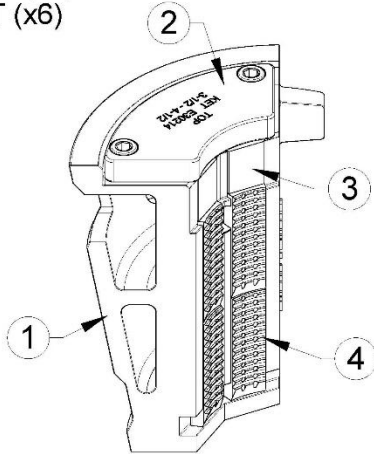

3.5" - 5.5"

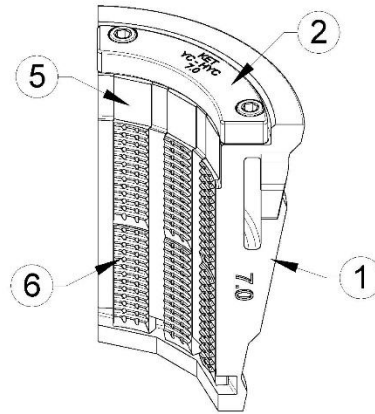

6.625" - 7.0"

REV.	DESCRIPTION	REVISIONS		DATE	APPROVED
		INITIAL	RELEASE		
0	INITIAL RELEASE			06/24/2020	J. RAMEY

UNLESS OTHERWISE SPECIFIED:

FINISHING DIMENSIONS:

IF APPLICABLE: 3.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

IF APPLICABLE: 2.00 ± .005

DRAWN: C. FONTENOT

DATE: 06/24/2020

APPROVED: J. RAMEY

DATE: 06/24/2020

MATERIAL GRADE: --

MATERIAL HARDNESS: --

WEIGHT: --

KEYSTONE ENERGY TOOLS

TITLE: KEYSTONE ENERGY TOOLS

KEYSTONE ENERGY TOOLS

KEYSTONE ENERGY TOOLS

SIZE: B

PCPN NO. 337-365-4458

DWG NO. E24072-A

SCALE: 1:2

SHEET: 1 OF 1

M:\Active Drawings\NewDrawings\Series\Series1410\YCM\ManualModels for Manual\4-5 YC Slip Assembly for Manual\AD_45M

7.0 YC Slip Type Elevator & Assemblies

PART NUMBER	DESCRIPTION	SIZE OF LINKS	WEIGHT(lbs.)
E24140	YC ELEVATOR LESS SLIP ASSEMBLY	2-1/4" - 2-3/4"	380



YC SLIP ASSEMBLIES

PART NUMBER	DESCRIPTION	WEIGHT(lbs.)
E34931	4 1/2" X 3 1/2" YC SLIP ASSEMBLY	150.00
E26830	4 1/2" X 4" YC SLIP ASSEMBLY	150.00
E24072-5	4 1/2" X 4 1/2" YC SLIP ASSEMBLY	150.00
E24072-7	5 1/2" X 5" YC SLIP ASSEMBLY	150.00
E24072-2	5 1/2" X 5 1/2" YC SLIP ASSEMBLY	150.00
E24077-1	7" X 7" YC SLIP ASSEMBLY	150.00
E24077-7	7" X 6 5/8" YC SLIP ASSEMBLY	150.00
E24072-4	4 1/2" YC SLIP SEGMENTS ONLY (MATCHED SET OF 4)	130.00
E24072	5 1/2" YC SLIP SEGMENTS ONLY (MATCHED SET OF 4)	130.00
E24077	7" YC SLIP SEGMENT ONLY (MATCHED SET OF 4)	130.00


YC SETTING RINGS

PART NUMBER	DESCRIPTION	# REQ.	WEIGHT(lbs.)
E34932	3 1/2" SETTING PLATE	1	8.00
E30209	4" SETTING PLATE	1	8.00
E30219	4 1/2" SETTING PLATE	1	7.00
E30220	5" SETTING PLATE	1	6.25
E30223	5 1/2" SETTING PLATE	1	6.13
E30226	6 5/8" SETTING PLATE	1	6.00
E30229	7" SETTING PLATE	1	5.50

YC BOTTOM GUIDE PLATES

PART NUMBER	DESCRIPTION	# REQ.	WEIGHT(lbs.)
E24071-2	7" BOTTOM GUIDE PLATE	1	3.75
E24071-3	6 5/8" BOTTOM GUIDE PLATE	1	4.50
E24071-1	5 1/2" BOTTOM GUIDE PLATE	1	5.50
E24071	5" BOTTOM GUIDE PLATE	1	7.75
E24071-4	4 1/2" BOTTOM GUIDE PLATE	1	8.50
E26827	4" BOTTOM GUIDE PLATE	1	8.50
E26827-1	3 1/2" BOTTOM GUIDE PLATE	1	8.00


8.0 YC Replacement Parts

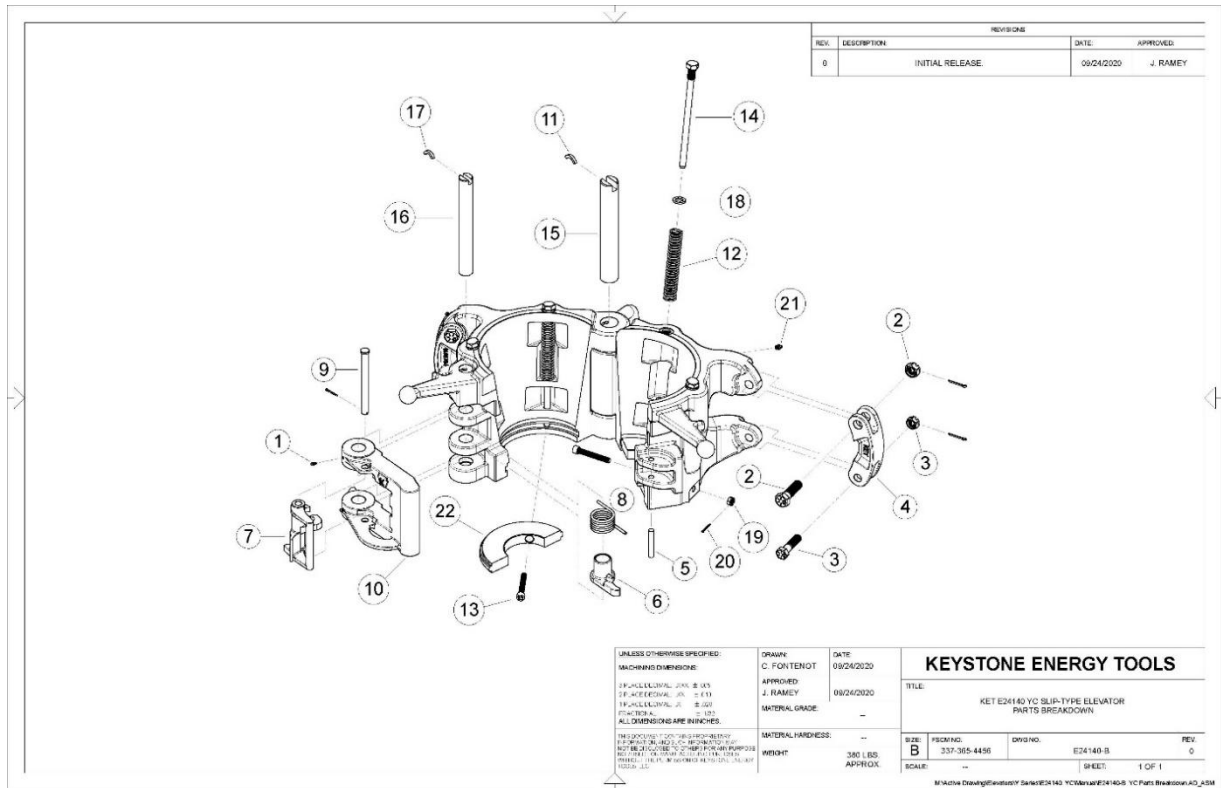

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	E316-S	LATCH GREASE ZERT	1
2	E8145-1	UPPER LINK BLOCK BOLT, NUT, AND COTTER	2
3	E8145-2	LOWER LINK BLOCK, NUT, AND BOLT	2
4	E9519	LINK BLOCK	2
5	E12529	DOOR LUG PIN	1
6	E12946	LATCH CAM	1
7	E12942	LATCH LOCK	1
8	E12978	LATCH SPRING	1
9	E13530	LATCH LOCK PIN	1
10	E15348	LATCH	1
11	E23116-1-R	HINGE PIN RETANIER	1
12	E24049	SLIP SPRING	4
13	E24075	BOTTOM GUIDE PLATE SCREW W/ NUT	4
14	E24076	SLIP BOLT	4
15	E24181	HINGE PIN	1
16	E24182	LATCH PIN	1
17	E24182-RT	LATCH PIN RETAINER	1
18	E939352-6	LOCK WASHER F/ SLIP BOLTS	4
19	E939484-5	BOTTOM GUIDE PLATE NUT	4
20	E939672-17	BOTTOM GUIDE PLATE/ COTTER	4
21	E940308-1	GREASE ZERT	1
22	E24071- SEE GUIDE PLATE CHART	BOTTOM GUIDE PLATE	1

Keystone ENERGY TOOLS

8.0 YC Slip Replacement Parts

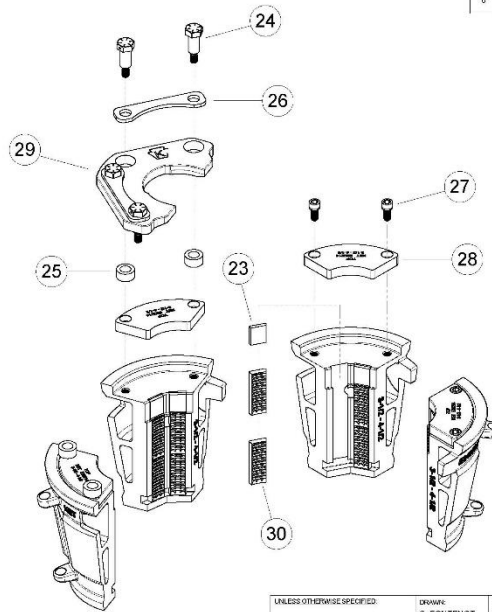

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
0	INITIAL RELEASE	09/24/2020	J. RAMEY

UNLESS OTHERWISE SPECIFIED:

MACHINING DIMENSIONS:

3" FLAT CIRCULAR 3.00 ± .005
 2" FLAT CIRCULAR 2.00 ± .005
 1" FLAT CIRCULAR 1.00 ± .005
 1/2" FLAT CIRCULAR .50 ± .005
 ALL DIMENSIONS ARE DECIMALS
 UNLESS OTHERWISE SPECIFIED

DRAWN:

C. FORTENOT

DATE:

09/24/2020

APPROVED:

J. RAMEY

09/24/2020

MATERIAL GRADE:

--

MATERIAL HARDNESS:

--

WEIGHT:

--

KEYSTONE ENERGY TOOLS

TITLE:

KEYSTONE ENERGY TOOLS
 YC SLIP SEGMENT
 PARTS BREAKDOWN

SUB:

B

FORM NO:

337-355-4655

DWG NO:

E24072-B1

REV:

0

SCALE:

--

SHEET:

1 OF 1

MPA/Stone Grouping/Elevator/Slip Segment/E24072-B1 YC Slip Parts Breakdown AD_A2M

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
23	E24506	INSERT SPACER	4
24	E30211	SETTING PLATE BOLT	4
25	E30213	RUBBER BUSHING	4
26	E30216	SETTING RING RETAINER	2
27	E941271-73	INSERT RETAINER SCREW	4
28	E30214	INSERT RET. RING 3 1/2" - 4 1/2"	4
28	E30224	INSERT RET. RING 5" & 5 1/2"	4
28	E30230	INSERT RET. RING 6 5/8" & 7"	4
29	SEE SETTING PLATE CHART	SETTING PLATES	1
30	SEE INSERT CHART	INSERTS	N/A

INSERTS

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
30	E16408	4 1/2" X 4 1/2" BASIC INSERT	16
30	E16407	5 1/2" - 7 5/8" BASIC INSERT	16
30	E24781	4 1/2" X 4" YC INSERT	16
30	E24779	4 1/2" X 3 1/2" YC INSERT	16
30	E24783	5 1/2" X 5" YC INSERT	16
30	E24785	5 1/2" X 4 1/2" YC INSERT	16
30	E24748	7" X 6 5/8" YC INSERT	24

Keystone ENERGY TOOLS

9.0 YC Wear Data

PART NUMBER	E24140
RATED CAPACITY	75 TON

STANDARD PINS

HINGE PIN PART #	E24181
TOTAL CLEARANCE(H)	0.035
HINGE PIN MIN. DIA. NEW	1.745
BORE DIA.MAX. NEW	1.752
BORE DIA.MAX.WORN	1.770

LATCH PIN PART #	E24182
TOTAL CLEARANCE(L)	0.035
LATCH PIN MIN. DIA. NEW	1.370
BORE DIA.MAX.NEW	1.377
BORE DIA.MAX.WORN	1.395

1/16" OVERSIZE PINS

HINGE PIN PART #	E24181-06
TOTAL CLEARANCE(H)	0.035
HINGE PIN MIN. DIA.	1.807
BORE DIA.MAX. NEW	1.815
BORE DIA.MAX.WORN	1.833

LATCH PIN PART #	E24182-06
TOTAL CLEARANCE(L)	.035
LATCH PIN MIN. DIA.	1.432
BORE DIA.MAX.NEW	1.440
BORE DIA.MAX.WORN	1.458



1/8" OVERSIZE PINS

HINGE PIN PART #	E24181-12
TOTAL CLEARANCE(H)	.035
HINGE PIN MIN. DIA. NEW	1.870
BORE DIA.MAX. NEW	1.878
BORE DIA.MAX.WORN	1.895


LATCH PIN PART #	N/A
TOTAL CLEARANCE(L)	N/A
LATCH PIN MIN. DIA. NEW	N/A
BORE DIA.MAX.NEW	N/A
BORE DIA.MAX.WORN	N/A

LIFTING EARS

DIMENSION (W) MIN	3.250
RADIUS -R	1.500
DIMENSION (M)	8.500

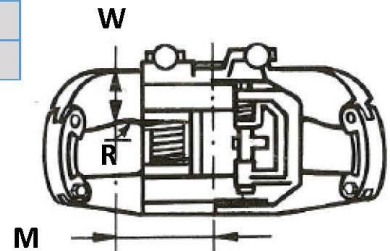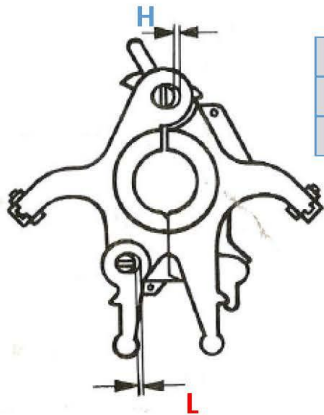

9.0 YC Wear Data

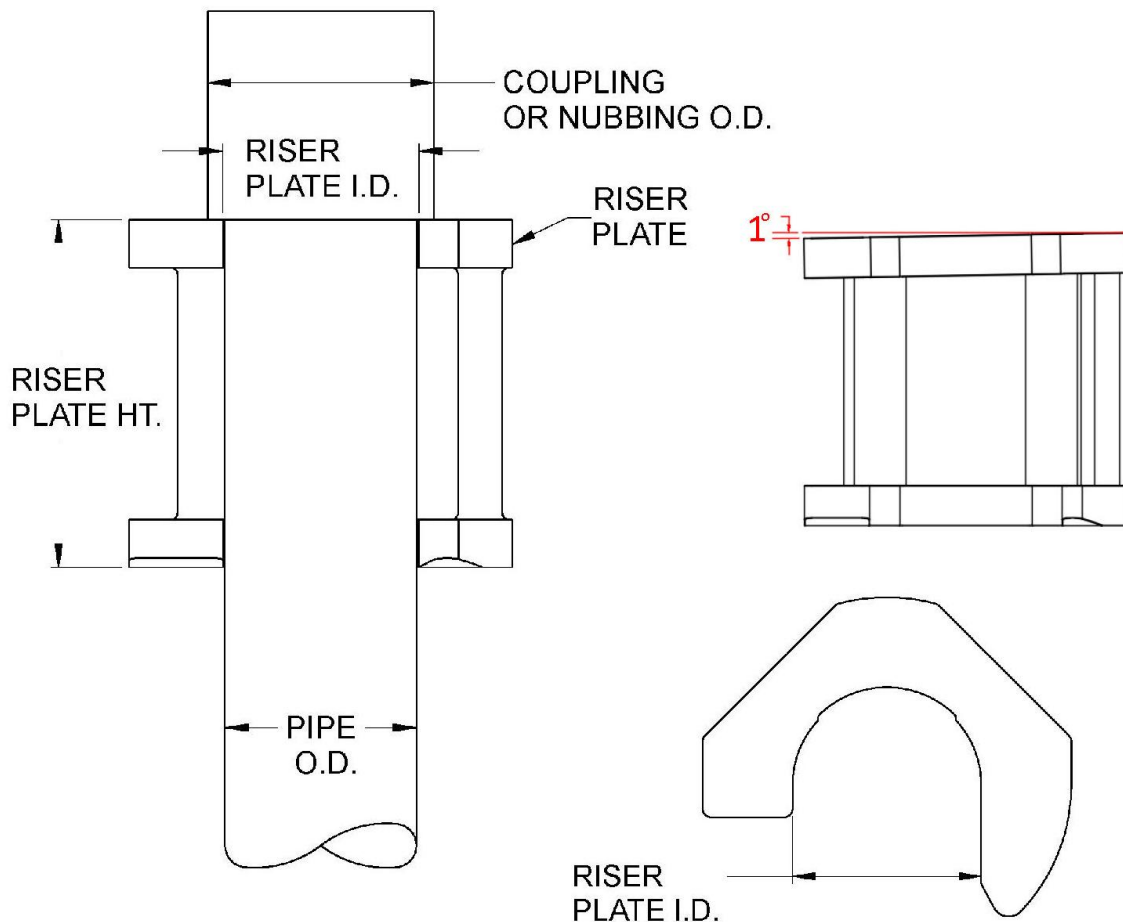

LIFT NUBBING OD, COUPLING OD, OR TJ OD – 0.250" = MAX SETTING RING ID

**APPLICABLE ON YC/HYC CONVENTIONAL OR RISER SETTING PLATE*

CONNECTION LENGTH OR UPSET LENGTH +0.250" = RISER PLATE HEIGHT

VERTICAL DISTURBANCE TOLERANCE = 1° FROM 90

NOTE—RISER SETTING PLATES ARE CONNECTION SPECIFIC AND ARE ENGRAVED WITH THE CONNECTION DATA NAME AND SIZE, INCLUDING WEIGHT, AND RISER SETTING PLATE ID

WARNING—Above wear data is for standard KET setting plates. Any custom size setting plates data may vary based on setting plate ID and pipe size. Always consult with a KET sales representative before making presumptions based on this data.

10.0 Reception, Storage, Transport & Decommissioning

Reception

Check the tool immediately after reception and re-preserve the tool as required (try to have this completed withing 1 month).

Any exposed or non painted metal surfaces should be coated with a rust preventative to prevent any corrosion build up.

Storage

The tool should be stored or palletized in a clean and dry place to avoid all environmental elements. It is recommended to store in an indoor environment of 60 – 70 Deg F with max humidity of 80%. If the tool is to be stored outdoor, then a cargo container would be appropriate to ensure the tool is not exposed to weather conditions.

Preserve the tool by greasing all areas defined in the maintenance requirements per the manual.

During storage, the tool shall still be inspected annually per inspection requirements in the user's manual.

Transport

When lifting the tool do so only by using its lifting ears only. The best way of transporting the tool is in its original palletized state. Ensure the tool is banded down accordingly to prevent the possibility of potential dropped objects and broken shipments.

Decommissioning

The tool may contain grease, steel, rubbers, plastic, stainless steel, mild steel and several assembled components with undefined consistency or mixtures. The tool can be contaminated with drilling fluids, hydraulic fluids and preservatives. After the tool is decommissioned, it is recommended to disassemble the tool in a place where waste fluids can be contained and properly disposed of.

⚠WARNING: any fluids, mud, or grease are potentially unsafe when in contact with the skin. Always wear gloves and safety goggles when disassembling the tool.

1. Clean the tool with a steam cleaner.
2. It is recommended to disassemble the tool in a place where drainage for waste fluids is possible.

CERTIFICATE OF WARRANTY AND GUARANTEE OF QUALITY

KET warrants all materials and products manufactured to be free from defects in material and workmanship, under normal use and service, when installed, used, and serviced in the manner provided and intended by the seller for a period of twelve (12) months after delivery. Seller's obligation under this warranty is expressly limited to repair or replacement, at its option, of any materials or products, returned to the seller's plant in New Iberia, Louisiana and which are determined by the seller to be defective. All freight charges for return and reshipment shall be paid by the customer. A new warranty period shall not be established for repaired or replaced material or products; such items shall remain under warranty only for the remainder of the warranty period on the original materials or products. This is the sole warranty of the seller and no other warranty is either expressed or implied, in fact or by law, including any warranty as to the merchantability or fitness for a particular use or purpose.

In case of goods or parts not wholly of seller's manufacture, seller shall make available to the customer whatever warranty or guarantee is extended to seller for such goods or parts by the supplier or manufacturer thereof.

Seller will not assume responsibility or liability for any repairs, rebuilding, welding or heat treating done to its material or products outside of seller's plant, such work shall void all warranties. All parts used in the manufacture and /or final assembly of seller's materials or products are necessary for both safety and operational performance. Omission of any part or failure to replace any worn part may result in the malfunction and a consequent safety hazard for which seller disclaims any responsibility or liability for injuries or damage as a result thereof.

Buyer's sole and only remedy in regard to any defective materials or products shall be the repair or replacement thereof as herein provided, and seller shall not be liable for any consequential, special, incidental or punitive damages resulting from or caused by any defective materials, products or supplies.



For more information, please contact us at:

Keystone Energy Tools

3711 Melancon Rd.

Broussard, LA 70518

www.k-e-t.com

Office: 1-337-365-4411

Fax: 1-337-365-4456

Revision History

Rev	Date	Changes	By
07	05/26/2021	Updated format/added rev history	Cody H.
08	03/10/2022	Added page 11 figure 2 (insert retainer installation) & figure 3 (wire tie illustration)	Cody H.
09	07/19/2022	Updated address	Cody H.
10	01/09/2023	Updated title page	Cody H.
11	04/08/2024	Added warning about shock loading	Cody H.
12	08/29/2025	Added setting plate wear data	Cody H.
13	02/05/2026	Added NOTE-Load rating determined by Elevator body not slip	Cody H.